# MAZDA MX3 1992-96

## SECTION INDEX


A/C /HEATER ..... 67
A/C REFRIGERANT CAPACITIES ..... 67
ABS ..... 68
AIR BAG SYSTEM ..... 68
AIR CLEANER ..... 71
CENTER CONSOLE ..... 73
CLEAR COAT IDENTIFICATION ..... 66
COOLING ..... 67
COWL & DASH ..... 72
CRUISE CONTROL SYSTEM ..... 68
ELECTRICAL ..... 72
EMISSION SYSTEM ..... 71
ENGINE/TRANS ..... 71
ENGINE/TRANS MOUNTS ..... 71
EXHAUST ..... 71
FRONT BUMPER ..... 66
FRONT DOOR ..... 74
FRONT DRIVE AXLE ..... 69
FRONT FENDER ..... 67
FRONT INNER STRUCTURE ..... 68
FRONT LAMPS ..... 66
FRONT SEAT ..... 73
FRONT STEERING LINKAGE/GEAR ..... 70
FRONT SUSPENSION ..... 69
FUEL TANK ..... 77
HOOD ..... 67
INFORMATION LABELS ..... 66
INSTRUMENT PANEL ..... 72
LIFTGATE ..... 76
PAINT CODE LOCATION ..... 66
QUARTER PANEL ..... 75
REAR BODY ..... 77
REAR BUMPER ..... 78
REAR LAMPS ..... 77
REAR SEAT ..... 73
REAR SUSPENSION ..... 76
ROCKER/PILLARS/FLOOR ..... 73
ROOF ..... 75
SEAT BELTS ..... 74
SPECIAL CAUTIONS ..... 66
STEERING PUMP ..... 70
STEERING WHEEL/COLUMN ..... 70
SUNROOF ..... 75
UNDERHOOD DIMENSIONS ..... 67
WHEEL ..... 69
WINDSHIELD ..... 72


## SPECIAL CAUTIONS

### AIR BAGS

Refer to Procedure Explanation 29 for Supplemental Restraint/Air Bag Special Cautions.

### SUSPENSION

Manufacturer advises that some new fasteners must be used whenever old fasteners are loosened or removed.

## PAINT CODE LOCATION

Paint code located on left door jamb.


## CLEAR COAT IDENTIFICATION

All metallic colors are clear coat.

## INFORMATION LABELS

*Illustration Located in Next Column*


| | | |
|---|---|---|
| 1 | **Label, Emission¶** | EA03-69-036C |
| 2 | **Label, Bolt Caution¶** | KL01-69-082A |
| 3 | **Label, Oil¶** | GA2A-69-D21A |
| 4 | **Label, A/C Caution¶** | UE38-61-439 |
| 5 | **Label, "V6"¶** | K805-13-307 |
| 6 | **Label, "INJECTION"¶** | K805-13-309 |
| 7 | **Label, Caution¶** | KL01-15-031 |
| 8 | **Label, VIN Plate¶** | GA02-69-068 |
| 9 | **Label, Tire¶** | EA01-69-014 |

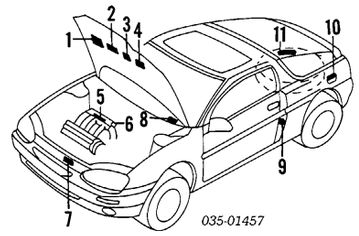



| | | |
|---|---|---|
| 10 | **Label, Unleaded Fuel¶** | UB40-69-C61 |
| 11 | **Label, Spare Tire¶** | GL01-69-073 |

*¶Order by Application*

## FRONT BUMPER

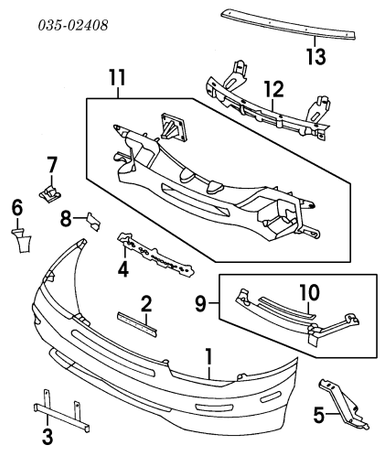


| | | | |
|---|---|---|---|
| 1 | **Cover, Front (P)** | | |
| | 4 Cyl | | EA01-50-031C-8J |
| | 6 Cyl | | EA03-50-031B |
| | *(P) Paint to Match* | | |
| 2 | **Bracket, License** | | HF05-50-0N0 |
| 3 | **Holder, License Plate** | | HF05-50-170 |
| 4 | **Grille** | | EA01-50-1T1A |
| 5 | **Bracket, Bumper** | R/L | EA01-50-G21-2 |
| 6 | **Cover, Grille (8)** | | EA01-50-101 |
| 7 | **Grommet** | R/L | EA01-50-0Z5 |
| 8 | **Retainer, Protector (3/Side)** | R/L | G158-50-803 |
| 9 | **Plate Assy, Cover** | R | EA01-50-1B0F |
| | | L | EA01-50-1C0F |
| 10 | **Seal, Plate¶** | R/L | EA01-50-0G9B |
| | *¶Included w/Cover Plate Assy* | | |
| 11 | **Reinf, Cover** | | EA01-50-070B |
| 12 | **Mount, Cover Reinf** | | EA01-50-1A0D |
| 13 | **Plate, Retainer** | | EA01-50-1AYC |

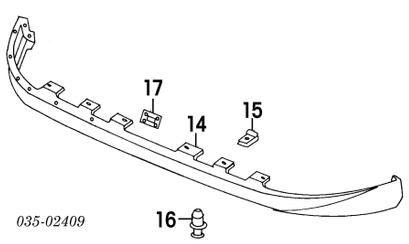



| | | | |
|---|---|---|---|
| 14 | **Spoiler** | | |
| | USA | | EA01-V4-900G |
| | Canada | | |
| | 1 Piece | | N.A. |
| | 2 Piece | R/L | N.A. |
| 15 | **Clip** | R | EA01-51-0A5 |
| | | L | EA01-51-0B5 |
| 16 | **Fastener (6)** | | B092-50-782 |
| 17 | **Clip, Joint** | | D002-50-044 |

## FRONT LAMPS


### HEADLAMP

*Illustration Located in Next Column*

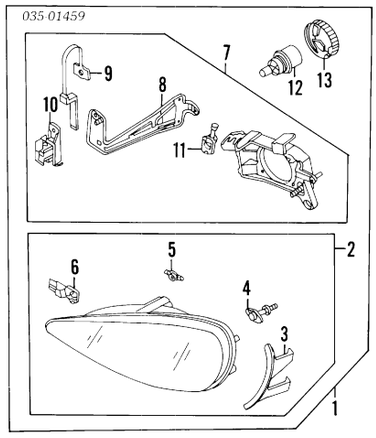



| | | | |
|---|---|---|---|
| 1 | **Headlamp Assy** | R | 8BE7-51-030 |
| | | L | 8BE7-51-040 |
| 2 | **Lens & Garnish Assy¶** | R | EA01-51-0K0B |
| | | L | EA01-51-0L0B |
| 3 | **Garnish¶ (a)** | R | EA01-51-0A9A |
| | | L | EA01-51-0B9A |
| 4 | **Shaft, Adjuster¶ (a)** | R/L | EA01-51-0H5 |
| 5 | **Joint, Leveling¶ (a)** | R/L | EA01-51-0E7 |
| 6 | **Retainer, Lamp¶ (a)** | R | EA01-51-0A5 |
| | | L | EA01-51-0B5 |
| | *(a) Included w/Lens & Garnish Assy* | | |
| 7 | **Bracket & Housing Assy¶** | R | EA01-51-03XB |
| | | L | EA01-51-04XB |
| 8 | **Bracket¶ (b)** | R | EA01-51-0A7 |
| | | L | EA01-51-0B7 |
| 9 | **Spacer¶ (b)** | R/L | EA01-51-0E8A |
| 10 | **Holder, Lamp¶ (b)** | R/L | EA01-51-0D7A |
| 11 | **Adjuster, Lamp¶ (b)** (2/Side) | R/L | EA01-51-0E5 |
| | *(b) Included w/Bracket & Housing Assy* | | |
| 12 | **Bulb¶** | R/L | 0000-11-9004-90 |
| 13 | **Retainer, Bulb¶** | R/L | EA01-51-0A3 |
| | *¶Included w/Headlamp Assy* | | |

### COMBINATION LAMP

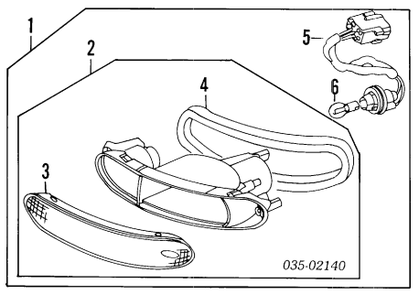


| | | | |
|---|---|---|---|
| 1 | **Lamp Assy, Combination** | R | EA01-51-060F |
| | | L | EA01-51-070F |
| 2 | **Lens & Body Assy¶** | R | EA01-51-06XE |
| | | L | EA01-51-07XE |
| 3 | **Lens¶ (a)** | R | EA01-51-061B |
| | | L | EA01-51-071B |
| 4 | **Gasket¶ (a)** | | |
| | 1992-93 | R/L | EA01-51-065 |
| | 1994-96 (a)-Serviced w/Lens & Body Assy | | |
| | *(a) Included w/Lens & Body Assy* | | |
| 5 | **Socket & Wire¶** | R/L | EA01-51-064D |
| 6 | **Bulb¶** | R/L | 0000-11-1157 |
| | *¶Included w/Combination Lamp Assy* | | |

### SIDE MARKER LAMP

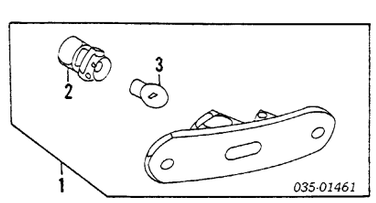



| | | | |
|---|---|---|---|
| 1 | **Lamp Assy, Side Marker** | R | EA01-51-5E0 |
| | | L | EA01-51-5F0 |
| 2 | **Socket¶** | R/L | NA01-51-5E2 |
| 3 | **Bulb¶** | R/L | 0000-11-0194 |
| | *¶Included w/Combination Lamp Assy* | | |



**Labor Times Shown are for Replacement with New OEM Undamaged Parts on New Undamaged Vehicles.**
**Comments or suggestions? Need assistance? Call 1-800-854-7030 or 858-578-6550. Ext. 8220. Fax 1-888-256-7969 or 858-549-0629.**


## HOOD

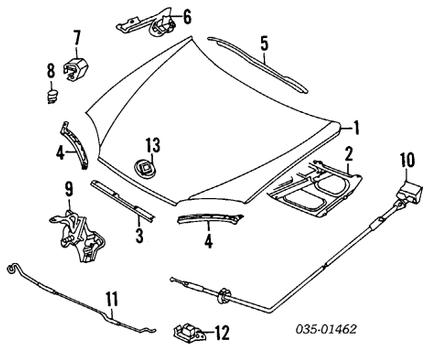


| | | | |
|---|---|---|---|
| 1 | **Panel, Hood** | | EAY1-52-310B |
| 2 | **Insulator** | | EA03-68-601C |
| 3 | **Seal, Front** | | EA01-56-750 |
| 4 | **Deflector** | R | EA01-56-730B |
| | | L | EA01-56-740B |
| 5 | **Seal, Rear** | | B481-56-760 |
| 6 | **Hinge** | R | EA01-52-410B |
| | | L | EA01-52-420B |
| 7 | **Cushion** | R/L | EA01-56-78XC |
| | **Spacer, Rear** | R | EA01-56-76XA |
| | | L | EA01-56-76ZA |
| 8 | **Bumper, Rubber** | R/L | LA01-56-786A |
| 9 | **Latch** | | EA01-56-620D |
| 10 | **Cable, Release** | | EA01-56-720A |
| 11 | **Rod, Prop** | | EA01-56-650 |
| 12 | **Holder, Rod** | | G144-52-518C |
| 13 | **Emblem Assy** | | BB1H-51-730 |
| | **Emblem¶** | | BB1H-51-731 |
| | **Clip, Emblem¶ (2)** | | LA01-51-958 |

*¶Included w/Emblem Assy*

## COOLING

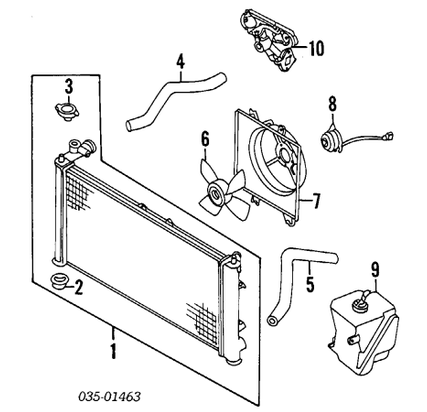



| | | | |
|---|---|---|---|
| 1 | **Radiator Assy** | | |
| | 4 Cyl | | |
| | Man Trans | 92-93 | B69J-15-200 |
| | | 94-96 | B6DC-15-200 |
| | Auto Trans | 92-93 | B66T-15-200C |
| | | 94-96 | B6DD-15-200B |
| | 6 Cyl | | |
| | Man Trans | | K801-15-200D |
| | Auto Trans | 92-93 | K802-15-200E |
| | | 94 | K835-15-200 |
| 2 | **Mount, Radiator¶** | | |
| | 4 Cyl | | |
| | 1992-93 | | |
| | Man Trans | R/L | K804-15-202 |
| | Auto Trans | R/L | K802-15-202 |
| | 1994-96 | R/L | B6DD-YV-SK1 |
| | 6 Cyl | R/L | K801-15-202 |
| 3 | **Cap, Radiator¶** | | |
| | 4 Cyl | | D316-15-205 |
| | 6 Cyl | 92-93 | KF01-15-205 |
| | | 94 | KL61-15-205 |
| | *¶Included w/Radiator Assy* | | |
| 4 | **Hose, Rad Upper** | | |
| | 4 Cyl | | B66S-15-186 |
| | 6 Cyl | | K801-15-18X |
| 5 | **Hose, Rad Lower** | | |
| | 4 Cyl | | B66S-15-185 |
| | 6 Cyl | 92-93 | K805-15-18Y |
| | | 94 | K834-15-185 |
| 6 | **Blade, Fan** | | |
| | 4 Cyl | | |
| | Man Trans | | E358-15-140 |
| | Auto Trans | | FEH5-15-140 |
| | 6 Cyl | | |
| | Man Trans | | K801-15-140 |
| | Auto Trans | | K802-15-140 |
| 7 | **Shroud, Fan** | | |
| | 4 Cyl | | |
| | Man Trans | | B66S-15-210 |
| | Auto Trans | | B66T-15-210 |
| | 6 Cyl | | K801-15-210 |
| 8 | **Motor, Fan** | | |
| | 4 Cyl | | |
| | Man Trans | | B66S-15-150 |
| | Auto Trans | | B66T-15-150 |
| | 6 Cyl | | K801-15-150 |
| 9 | **Tank Assy, Coolant** | | K801-15-350A |
| | **Cap, Tank¶** | | K801-15-355 |
| | *¶Included w/Coolant Tank Assy* | | |
| 10 | **Pump, Water** | | |
| | 4 Cyl | 92-93 | B3C7-15-010A |
| | | 94-96 | 8ABB-15-010A |
| | 6 Cyl | 92-93 | 8AK2-15-010 |
| | | 94 | 8AK2-15-010 |
| | **Pulley, Water Pump** | | |
| | 4 Cyl | | B3C7-15-131 |
| | 6 Cyl | 92-93 | KL01-15-131 |
| | | 94 | KL47-15-131 |
| | **Belt, Drive-See Electrical Section** | | |

## A/C REFRIGERANT CAPACITIES

**A/C R-12 Refrigerant Capacity**
1992-93: 28 Ozs (1.75 Lbs)
**A/C R-134a Refrigerant Capacity**
1994-96: 26.5 Ozs (1.65 Lbs)


## A/C /HEATER

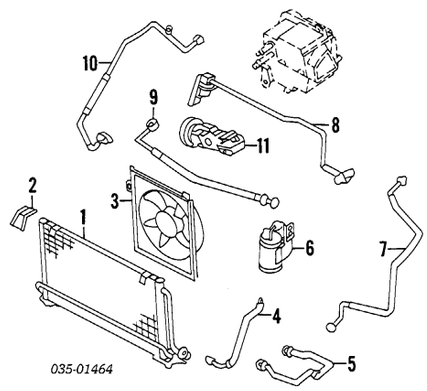



| | | | |
|---|---|---|---|
| 1 | **Condenser** | | EA01-61-480A |
| 2 | **Bracket, Condenser** | R/L | EA01-61-47Y |
| 3 | **Fan, Condenser** | | |
| | 4 Cyl | | EA01-61-710A |
| | 6 Cyl | | EA03-61-710A |
| 4 | **Pipe, Receiver/Drier** | | EA70-61-465 |
| 5 | **Pipe, Condenser** | | EA70-61-464 |
| 6 | **Receiver/Drier** | | EA70-61-500 |
| 7 | **Tube, Receiver/Drier** | 92-93 | EA70-61-466 |
| | | 94-96 | EA70-61-466 |
| 8 | **Tube, Evaporator** | 92-93 | EA01-61-467A |
| | | 94-96 | EA70-61-467 |
| 9 | **Hose, Pressure** | | |
| | 4 Cyl | 92-93 | EA76-61-461 |
| | | 94-96 | EA76-61-461 |
| | 6 Cyl | 92-93 | EA03-61-461A |
| | | 94 | EA70-61-461 |
| 10 | **Hose, Suction** | | |
| | 4 Cyl | 92-93 | EA01-61-462A |
| | | 94-96 | EA76-61-462 |
| | 6 Cyl | 92-93 | EA03-61-462A |
| | | 94 | EA70-61-462 |
| 11 | **Compressor** | | |
| | 4 Cyl | 92-93 | EA01-61-450 |
| | | 94-96 | EA76-61-450C |
| | 6 Cyl | 92-93 | EA03-61-450 |
| | | 94 | EA70-61-450C |

*Illustration Located in Next Column*


| | | | |
|---|---|---|---|
| 12 | **Evaporator Assy** | 92-93 | BR70-61-520B |
| | | 94-96 | EA70-61-520 |
| 13 | **Core, Evaporator¶** | | BR70-61-J10A |
| 14 | **Valve, Expansion¶** | 92-93 | BR70-61-J14 |
| | | 94-96 | BC1M-61-J14 |
| 15 | **Thermostat¶** | | BR70-61-J20 |
| 16 | **Case, Evaporator Upper¶** | | BR70-61-J01 |
| 17 | **Case, Evaporator Lower¶** | | BR70-61-J02 |
| | *¶Included w/Evaporator Assy* | | |
| 18 | **Heater Assy** | | |
| | 4 Cyl | 92-93 | EA01-61-130A |
| | | 94-96 | EA76-61-130 |
| | 6 Cyl | 92-93 | EA03-61-130A |
| | | 94 | EA70-61-130 |

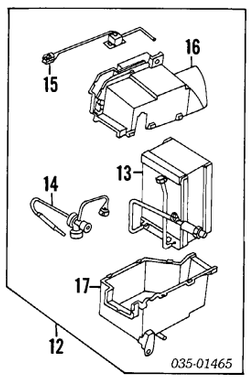

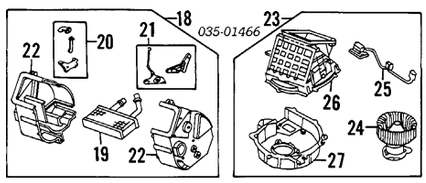
| | | | |
|---|---|---|---|
| 19 | **Core, Heater¶** | | |
| | 4 Cyl | | BR70-61-A10 |
| | 6 Cyl | | EA29-61-A10 |
| 20 | **Linkage, Temp¶** | | BR70-61-A20 |
| 21 | **Linkage, Mode¶** | | BR70-61-A30 |
| 22 | **Case, Heater¶** | R/L | EA01-61-A01-2 |
| | *¶Included w/Heater Assy* | | |
| 23 | **Blower Assy** | 92-93 | EA77-61-140 |
| | | 94 | EA70-61-140 |
| 24 | **Fan & Motor, Blower (a)** | | BR70-61-B10 |
| 25 | **Resistor (a)** | | BR70-61-B15 |
| 26 | **Case, Blower Upper (a)** | | BR70-61-B01 |
| 27 | **Case, Blower Lower (a)** | | BR70-61-B02 |
| | *(a) Included w/Blower Assy* | | |

## FRONT FENDER

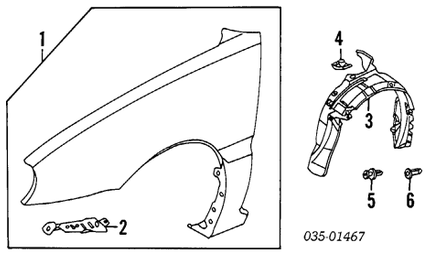



| | | | |
|---|---|---|---|
| 1 | **Fender Assy** | R | EAY1-52-100 |
| | | L | EAY1-52-200 |
| 2 | **Brkt, Lamp¶** | R | EA01-52-241 |
| | | L | EA01-52-251 |
| | *¶Included w/Fender Assy* | | |
| 3 | **Shield, Splash** | R | EA01-56-131B |
| | | L | EA01-56-141B |
| 4 | **Clip, Shield (3/Side)** | R/L | B455-56-135 |
| 5 | **Rivet, Shield (2/Side)** | R/L | B455-56-143 |
| 6 | **Grommet (2/Side)** | R/L | B455-56-145 |
| | **Emblem** | | |
| | "GS" | R/L | EA29-51-761-60 |

## UNDERHOOD DIMENSIONS


*Illustration Located in Next Column*

## UNDERHOOD DIMENSIONS Cont'd

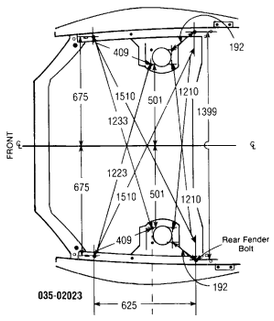



## FRONT INNER STRUCTURE

### FRONT

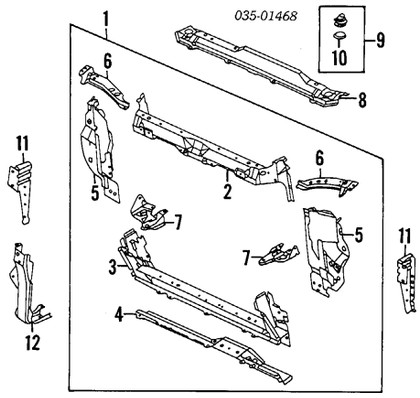



| | | | |
|---|---|---|---|
| 1 | **Support Assy, Radiator** | | E040-53-100 |
| 2 | **Bar, Upper Tie¶** | | E040-53-150 |
| 3 | **Bar, Lower Tie¶** | | EA01-53-160A |
| 4 | **Crossmember, Lower¶** | | EA01-53-170A |
| 5 | **Panel, Side¶** | R | E040-53-120 |
| | | L | E040-54-120 |
| 6 | **Extension, Upper¶** | R | EA01-53-130B |
| | | L | EA01-54-130B |
| 7 | **Bracket, Lower¶** | R | EA01-53-17Y |
| | | L | EA01-54-17Y |
| | *¶Included w/Radiator Support Assy* | | |
| 8 | **Member, Upper** | | E040-56-17Y |
| 9 | **Mount, Radiator** | | EA01-56-180B |
| 10 | **Insulator, Mount-Serviced w/Rad Mount Assy** | | |
| 11 | **Bracket, Side** | 92-93 R | EA01-53-32ZA |
| | | L | EA01-54-325A |
| | | 94-96 R | E040-53-32Z |
| | | L | E040-54-32Z |
| 12 | **Support, Latch** | | EA01-53-35XB |


### SIDE

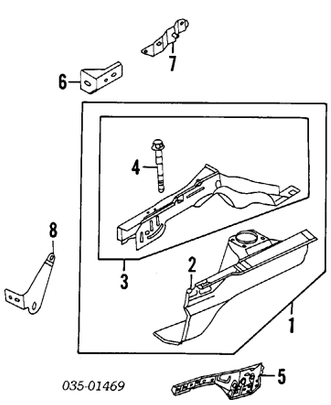


| | | | |
|---|---|---|---|
| 1 | **Apron Assy** | R | EA01-53-200 |
| | | L | EA01-54-200 |
| 2 | **Panel, Apron¶** | R | EA01-53-210C |
| | | L | EA01-54-210C |
| 3 | **Rail Assy, Front¶** | R | EA01-53-300A |
| | | L | EA01-54-300 |
| 4 | **Bolt, Rail Mtg¶ (a)** | 92-93 R/L | B455-53-319 |
| | | 94-96 R/L | B456-53-319 |
| | *¶Included w/Apron Assy* | | |
| | *(a) Included w/Front Rail Assy* | | |
| 5 | **Reinf, Apron** | R | B481-53-281D |
| | | L | B481-54-281D |
| 6 | **Bracket, Front** | R | EA01-53-335 |
| | | L | EA01-54-335 |
| 7 | **Bracket, ABS** | | B603-54-39ZB |
| 8 | **Hook, Tie-Down** | R | EA01-53-36XA |
| | | L | EA01-54-36XA |

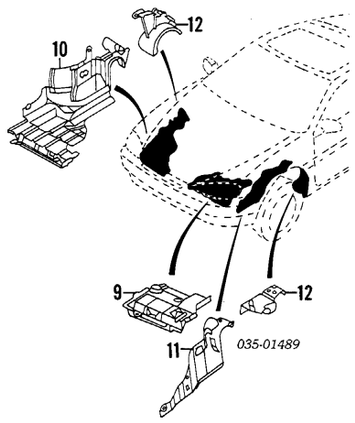


| | | | |
|---|---|---|---|
| 9 | **Cover, Under** | | EA01-56-121A |
| 10 | **Shield, Eng Front Splash** | | EA01-56-310A |
| 11 | **Shield, Eng Rear Splash** | | |
| | 4 Cyl | | B455-56-321B |
| | 6 Cyl | | E018-56-321 |
| 12 | **Extension, Splash Shield** | | |
| | Right | | |
| | 4 Cyl | | BC1D-56-114 |
| | 6 Cyl | | EA07-56-114A |
| | Left | | |
| | w/ABS | | B603-56-115 |
| | w/o ABS | | B455-56-115 |
| | **Mudguard¶** | R | E016-51-840A-PZ |
| | | L | E016-51-850A-PZ |
| | *¶Black listed, Order by Application* | | |
| | *D2 Creek Blue MC; PT Chaste White; PZ Brilliant Black;* | | |
| | *SQ Blaze Red; 29 Sparkle Green M; 3L Silver Stone Metallic* | | |

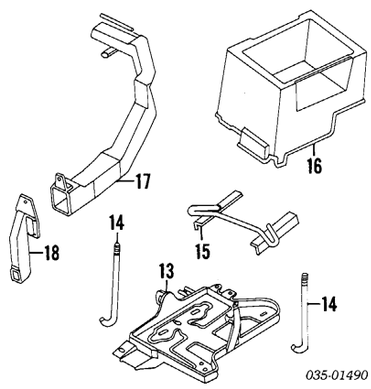



| | | | |
|---|---|---|---|
| 13 | **Tray, Battery** | | |
| | Man Trans | | EA01-56-040A |
| | Auto Trans | | EA02-56-040B |
| 14 | **Bolt, Battery Hold** | R | B180-56-034A |
| | | L | B455-56-034 |
| 15 | **Hold-Down, Battery** | | B465-56-03XA |
| 16 | **Box, Battery** | | PN41-18-591A |
| 17 | **Duct, Cooling** | | K801-18-596 |
| 18 | **Inlet, Duct** | | K806-18-596A |


## ABS

*Illustration Located in Next Column*

| | | | |
|---|---|---|---|
| 1 | **Sensor, Front ABS** | R | E042-43-70XA |
| | | L | E042-43-73XA |
| 2 | **Sensor, Rear ABS** | R | B603-43-72YJ |
| | | L | E042-43-71Y |
| 3 | **Clip, Sensor Harness** | | |
| | (4/Side) | R/L | B530-43-636 |
| 4 | **Hydraulic Unit, ABS** | | B603-43-7A0E |
| 5 | **Mount, Hydraulic Unit** | 92-93 | B603-43-7A6 |
| | | 94-96 | GA2G-43-7A6 |
| 6 | **Brkt, Mounting** | | B603-43-310F |
| 7 | **Band, Wire** | | B603-43-CG1 |
| 8 | **Retainer, Bracket** | | E020-41-35X |
| | **Box, ABS Cont** | 92-93 | EA01-67-650A |
| | | 94-96 | EA70-67-650B |

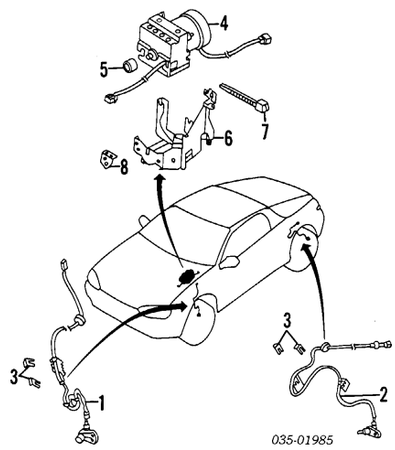


## AIR BAG SYSTEM

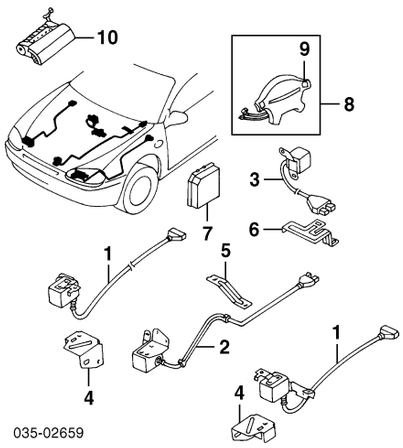


| | | | |
|---|---|---|---|
| 1 | **Sensor, Front** | R | EA70-57-K2XE |
| | | L | EA70-57-K2YD |
| 2 | **Sensor, Center** | | EA70-57-K1XB |
| 3 | **Sensor, Inner** | | EA70-57-K40 |
| 4 | **Bracket, Front Sensor** | | |
| | USA | R | EA90-57-KX0C |
| | | L | EA90-57-KY0C |
| | Canada-Serviced w/Front Sensor | | |
| 5 | **Bracket, Center Sensor** | | EA70-57-KX3A |
| 6 | **Bracket, Inner Sensor** | | EA70-57-KX1 |
| 7 | **Module Unit, Diagnostic** | | EA70-67-7F0A |
| 8 | **Module Assy, Driver Air Bag** | | EA70-57-K00D |
| 9 | **Switch, Horn¶** | | BC1M-57-K0Z |
| | *¶Included w/Driver Air Bag Module Assy* | | |
| 10 | **Module, Pass Air Bag** | | EA70-K7X-02 |
| | **Clockspring¶-See Steering Wheel/Column Section** | | |
| | *¶Serviced w/Combination Switch* | | |


## CRUISE CONTROL SYSTEM

*Illustration Located in Next Column*

| | | | |
|---|---|---|---|
| 1 | **Actuator Assy, Cruise** | | EA01-66-310A |
| 2 | **Bracket, Actuator¶** | | EA01-66-3A1 |
| 3 | **Bracket, Cable¶** | | EA01-66-3A2A |
| 4 | **Guide, Cable¶** | | BR70-66-3A8A |
| | *¶Included w/Cruise Actuator Assy* | | |
| 5 | **Cable** | | |
| | 4 Cyl | | EA76-66-311 |
| | 6 Cyl | | BR70-66-311E |
| 6 | **Control, Cruise** | | EA01-66-320A |
| 7 | **Block, Main Fuse** | | |
| | 4 Cyl | | EA01-66-760 |
| | 6 Cyl | | EA03-66-760 |




**Labor Times Shown are for Replacement with New OEM Undamaged Parts on New Undamaged Vehicles.**
**Comments or suggestions? Need assistance? Call 1-800-854-7030 or 858-578-6550. Ext. 8220. Fax 1-888-256-7969 or 858-549-0629.**

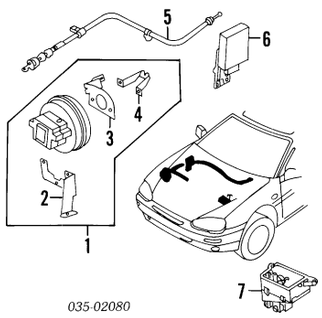

035-02080

## WHEEL

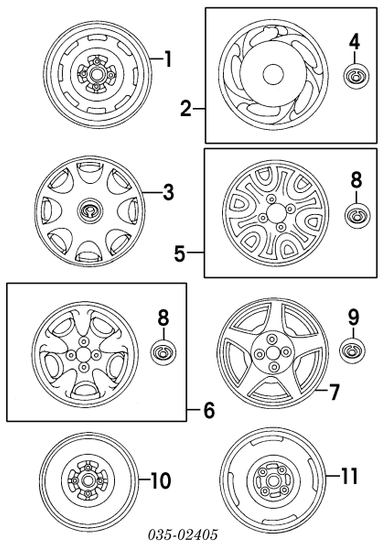


035-02405

| | | | |
|---|---|---|---|
| 1 | **Wheel, Steel** | | |
| | 14x5-1/2JJ" | | 9965-A9-554 |
| | **Cover Assy, Wheel** | | |
| 2 | 1992-93 | | |
| | To 2-1-92 | | EA25-37-170A |
| | From 2-1-92 | | EA01-37-170 |
| 3 | 1994-96 | | EA70-37-170 |
| 4 | **Emblem¶ (a)** | | EA25-37-172B |
| | *¶Included w/Wheel Cover Assy* | | |
| | *(a) Order by Application* | | |
| | **Wheel Assy, Aluminum** | | |
| 5 | 14x5JJ" | | |
| | To 2-1-92 | | 8BE3-37-600 |
| | From 2-1-92 | | 8BE5-37-600 |
| | 15x6JJ" | | |
| 6 | 1992-93 | | |
| | To 2-1-92 | | 8BE4-37-600 |
| | From 2-1-92 | | |
| | GS, Base Model | | 8BE6-37-600 |
| | GS Special Edition | | 8BE9-37-600 |
| 7 | 1994 | | 9965-B2-605 |
| | **Emblem** | | |
| 8 | 1992-93¶ (a) | | EA30-37-192B |
| 9 | 1994-96 | | EA02-37-192 |
| | *¶Included w/Aluminum Wheel Assy* | | |
| | *(a) Order by Application* | | |
| | **Wheel, Spare** | | |
| 10 | 14x4TX" | | 9965-18-4040 |
| 11 | 15x4TX" | | 9965-23-4050 |
| | **Stem, Valve¶** | | 9963-60-4130 |
| | *¶Order by Application* | | |
| | **Nut, Lug** | | |
| | Steel Wheels | | 0603-26-161A |
| | Alloy Wheels | | B002-37-160A |

## FRONT SUSPENSION


*Illustration Located in Next Column*

| | | | |
|---|---|---|---|
| 1 | **Rotor, Brake** | R/L | BB7E-33-25XD |
| 2 | **Nut, Lock** | R/L | GJ21-33-042B |
| 3 | **Hub** | R/L | B01A-33-060A |

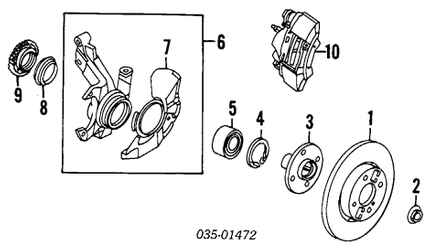


035-01472

| | | | |
|---|---|---|---|
| 4 | **Ring, Bearing Snap** | R/L | B21M-33-048 |
| 5 | **Bearing, Wheel** | R/L | B455-33-047D-MV |
| 6 | **Knuckle Assy** | | |
| | w/ABS | R | EA07-33-020E |
| | | L | EA07-33-030E |
| | w/o ABS | R | EA03-33-020E |
| | | L | EA03-33-030E |
| 7 | **Shield, Splash¶** | R | B01A-33-261B |
| | | L | B01A-33-271B |
| | *¶Included w/Knuckle Assy* | | |
| 8 | **Seal, Wheel Bearing** | R/L | G304-33-065 |
| 9 | **Rotor, ABS** | | |
| | 4 Cyl | 92-93 R/L | B613-33-471B |
| | | 94-96 R/L | B603-33-471 |
| | 6 Cyl | R/L | B613-33-471B |
| | **Sensor, ABS-See Anti-Lock Brake System Section** | | |
| 10 | **Caliper, Brake** | R | BRY4-33-98ZR |
| | | L | BRY4-33-99ZR |

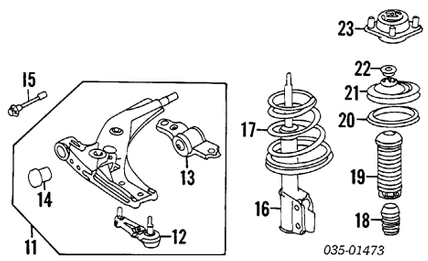

035-01473


| | | | |
|---|---|---|---|
| 11 | **Arm Assy, Lower Control** | R | E016-34-300H |
| | | L | E016-34-350H |
| 12 | **Ball Joint¶** | 92-93 R/L | E016-34-550 |
| | | 94-96 R/L | BTDA-34-550 |
| 13 | **Bushing, Mounting¶** | | |
| | To 6-94 | R | EA01-34-46XA |
| | | L | EA01-34-46YA |
| | From 6-94 | R | BC1F-34-46X |
| | | L | BC1F-34-46Y |
| 14 | **Bushing, Lower Arm¶** | R/L | EA01-34-470 |
| | *¶Included w/Lower Control Arm Assy* | | |
| 15 | **Bolt, Lower Arm** | R/L | B455-34-113 |
| 16 | **Strut¶** | | |
| | 4 Cyl | R | E026-34-700D |
| | | L | E026-34-900D |
| | 6 Cyl | | |
| | w/ABS | R | E026-34-700D |
| | | L | E026-34-900D |
| | w/o ABS | R | E026-34-700D |
| | | L | E026-34-900D |
| 17 | **Spring, Coil¶** | R/L | EA06-34-011C |
| | *¶Order by Application* | | |
| 18 | **Bumper, Stopper** | | |
| | To 8-94 | R/L | B481-34-111A |
| | From 8-94 | R/L | B455-34-111B |
| 19 | **Cover, Lever** | R/L | B481-34-015 |
| 20 | **Seat, Spring Lower** | R/L | B455-34-012 |
| 21 | **Seat, Spring Upper** | R/L | B455-34-340A |
| 22 | **Bushing, Mounting** | R/L | B455-34-38XB |
| 23 | **Insulator, Mounting** | R/L | B455-34-380D |

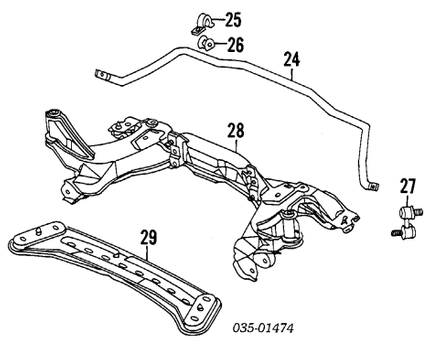

035-01474

| | | | |
|---|---|---|---|
| 24 | **Bar, Stabilizer** | | |
| | 4 Cyl | | E016-34-151 |
| | 6 Cyl | | EA03-34-151B |
| 25 | **Bracket, Stabilizer** | | |
| | To 6-94 | R/L | B461-34-155A |
| | From 6-94 | R/L | BC1D-34-155B |
| 26 | **Bushing, Stabilizer** | | |
| | 4 Cyl | R/L | B459-34-156A |
| | 6 Cyl | R/L | EA03-34-156 |
| 27 | **Link, Stabilizer** | R/L | EA03-34-170A |
| 28 | **Crossmember, Suspension** | | |
| | 4 Cyl | | EA01-34-800G |
| | 6 Cyl | | EA03-34-800H |
| 29 | **Reinf, Crossmember** | | |
| | 6 Cyl | | B01C-34-H90 |

## FRONT DRIVE AXLE

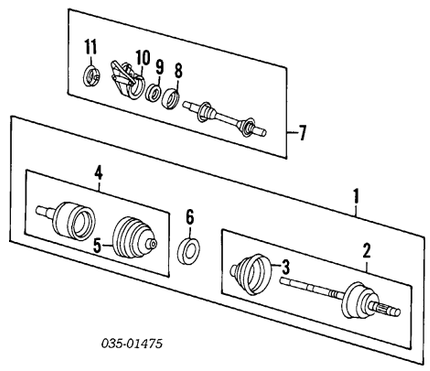


035-01475

| | | | |
|---|---|---|---|
| 1 | **Shaft Assy, Axle** | | |
| | 4 Cyl | | |
| | 1992-93 | R | FZ25-25-400A |
| | | L | F025-25-600G |
| | 1994-96 | | |
| | Right | | |
| | w/ABS | | |
| | Man Trans | | FA10-25-50X |
| | Auto Trans | | FA07-25-50X |
| | w/o ABS | | |
| | Man Trans | | F063-25-500R-0E |
| | Auto Trans | | F063-25-500R-0E |
| | Left | | |
| | w/ABS | | F029-25-60XA |
| | w/o ABS | | F025-25-600G |
| | 6 Cyl | | |
| | 1992-93 | | |
| | w/ABS | R | F035-25-50X |
| | | L | F035-25-600A |
| | w/o ABS | R | F036-25-500 |
| | | L | F036-25-600B |
| | 1994 | | |
| | Man Trans | | |
| | w/ABS | R | GA07-25-50XA |
| | | L | F035-25-60XA |
| | w/o ABS | R | GA06-25-500A |
| | | L | F036-25-600B |
| | Auto Trans | R | FF01-25-500A |
| | | L | F016-25-600B |
| 2 | **Joint Set, Outer¶** | | |
| | 4 Cyl | | |
| | 1992-93 | R | F025-22-510B |
| | | L | F025-22-610B |
| | 1994-96 | | |
| | Right | | |
| | w/ABS | | |
| | Man Trans | | FA10-22-510 |
| | Auto Trans | | FA07-22-510 |
| | w/o ABS | | |
| | Man Trans | | FA09-22-510C |
| | Auto Trans | | F063-22-510C |
| | Left | | |
| | w/ABS | | F029-22-610B |
| | w/o ABS | | F025-22-610B |
| | 6 Cyl | | |
| | 1992-93 | | |
| | w/ABS | R | F035-22-510A |
| | | L | F035-22-610A |
| | w/o ABS | R | F036-22-510A |
| | | L | F036-22-610A |
| | 1994 | | |
| | Man Trans | | |
| | w/ABS | R | GA07-22-510A |
| | | L | F035-22-610A |
| | w/o ABS | R | GA06-22-510A |
| | | L | F036-22-610A |
| | Auto Trans | R | FF01-22-510A |
| | | L | F016-22-510A |
| 3 | **Boot Kit, Outer¶ (a)** | | |
| | 4 Cyl | | |
| | 1992-93 | R/L | BS10-V9-050-9U |
| | 1994-96 | R/L | BS10-V9-050-9U |
| | 6 Cyl | | |
| | 1992-93 | R/L | BS40-V9-050-9U |
| | 1994 | | |
| | Man Trans | R/L | BS40-V9-050-9U |
| | Auto Trans | R/L | BS40-V9-050-9U |
| | *(a) Included w/Outer Joint Set* | | |
| 4 | **Joint Set, Inner¶** | | |
| | 4 Cyl | 92-93 R/L | FZ02-22-520A |
| | | 94-96 R | F061-22-520 |
| | | L | FZ02-22-520A |
| | 6 Cyl | | |

## FRONT DRIVE AXLE Cont'd

| | | |
|---|---|---|
| 1992-93 | R | F035-22-520 |
| | L | F035-22-620A |
| 1994 | | |
| Man Trans | R/L | F065-22-520 |
| Auto Trans | R | F015-22-520 |
| | L | F015-22-620B |
| **5 Boot Kit, Inner¶ (a)** | | |
| 4 Cyl 92-93 | R/L | F061-22-540-9U |
| 94-96 | R/L | F061-22-540-9U |
| 6 Cyl | | |
| 1992-93 | R/L | F037-22-540-9U |
| 1994 | | |
| Man Trans | R/L | F037-22-540-9U |
| Auto Trans | R/L | F015-22-540 |
| *(a) Included w/Inner Joint Set* | | |
| **6 Damper¶** | | |
| 4 Cyl 92-93 | L | F002-25-411B |
| *¶Included w/Axle Shaft Assy* | | |
| **7 Shaft Assy, Intermediate** | | |
| 4 Cyl | | |
| Man Trans | | F055-25-700B |
| Auto Trans | | F056-25-700C |
| 6 Cyl | | |
| 1992-93 | | G562-25-700B |
| 1994 | | |
| Man Trans | | GA09-25-700C |
| Auto Trans | | FA01-25-700A |
| **8 Seal, Inner¶** | | |
| 4 Cyl | | G560-25-744 |
| 6 Cyl 92-93 | | G560-25-744 |
| 94 | | G569-25-744 |
| **9 Bearing¶** | | |
| 4 Cyl | | 9960-68-2064 |
| 6 Cyl 92-93 | | 9960-68-2064 |
| 94 | | 569-25-155 |
| **10 Brkt, Intermediate Shaft¶** | | |
| 4 Cyl | | |
| Man Trans | | F055-25-741A |
| Auto Trans | | F056-25-741A |
| 6 Cyl 92-93 | | G564-25-741B |
| 94 | | G569-25-741B |
| **11 Seal, Outer¶** | | |
| 4 Cyl | | G560-25-742 |
| 6 Cyl 92-93 | | G560-25-742 |
| 94 | | G569-25-742 |
| *¶Included w/Intermediate Shaft Assy* | | |

## FRONT STEERING LINKAGE/GEAR

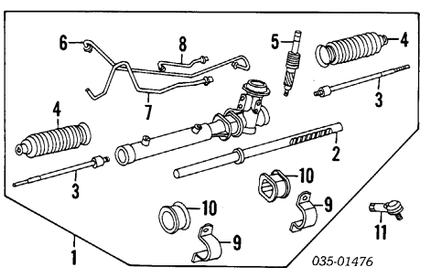

035-01476


| | | |
|---|---|---|
| **1 Gear Assy** | | |
| 4 Cyl | | EA01-32-110R-0J |
| 6 Cyl | | EA04-32-110R-0E |
| **2 Rack, Steering¶** | | |
| 4 Cyl | | BR71-32-119 |
| 6 Cyl | | E018-32-119 |
| **3 Rod, Inner Tie¶** | | |
| 4 Cyl | R | E016-32-25X |
| | L | E016-32-24X |
| 6 Cyl | R/L | E018-32-250A |
| **4 Boot, Dust¶** | | |
| 4 Cyl | R/L | B456-32-125 |
| 6 Cyl | R/L | E018-32-125 |
| **5 Pinion¶** | | |
| 4 Cyl | | |
| To 4-93 | | BR71-32-380 |
| From 4-93 | | BR72-32-380 |
| 6 Cyl | | EA04-32-380 |
| **6 Pipe, Pressure¶** | | |
| 4 Cyl | | BR71-32-451 |
| 6 Cyl | | EA04-32-45X |
| **7 Pipe, Return¶** | | |
| 4 Cyl | | BR71-32-451 |
| 6 Cyl | | EA04-32-45YA |
| **8 Pipe, Crossover¶** | | |
| 4 Cyl | | BR71-32-481 |
| 6 Cyl 92-93 | | EA04-32-480 |
| 94 | | EA04-32-480A |
| **9 Bracket, Gear Mount¶** | | |
| 4 Cyl | R/L | B456-32-134-3 |
| 6 Cyl | R | E018-32-133A |
| | L | E018-32-134 |
| **10 Bushing, Gear Mount¶** | | |
| 4 Cyl | R | B595-32-123 |
| | L | B456-32-124 |
| 6 Cyl | R | E018-32-123A |
| | L | E018-32-124 |
| *¶Included w/Gear Assy* | | |
| **11 End, Tie Rod** | R/L | 8AB2-32-280 |

## STEERING PUMP

| | |
|---|---|
| **Pump Assy, Steering** | |
| 4 Cyl | B456-32-600G |
| 6 Cyl | EA03-32-600D |
| **Pulley, Pump¶** | |
| 4 Cyl-Serviced w/Strg Pump Assy | |
| 6 Cyl | E018-32-620 |
| *¶Included w/Steering Pump Assy* | |
| **Reservoir, Pump** | |
| 4 Cyl | BR71-32-690D |
| 6 Cyl | EA03-32-690A |
| **Bracket, Pump Mount** | |
| 4 Cyl | B25D-32-680 |
| 6 Cyl | EA03-32-660 |
| **Support, Pump** | |
| 4 Cyl | B456-32-614 |
| 6 Cyl | EA03-32-609 |
| **Hose, Pressure** | |
| 4 Cyl | BR71-32-49YC |
| 6 Cyl | EA04-32-490E |
| **Hose, Return** | |
| 4 Cyl | EA01-32-684A |
| 6 Cyl | G563-32-684 |
| **Tube, Cooling** | |
| 4 Cyl | EA01-32-5L0B |
| 6 Cyl | EA03-32-5L0B |


## STEERING WHEEL/COLUMN

### 1992-93

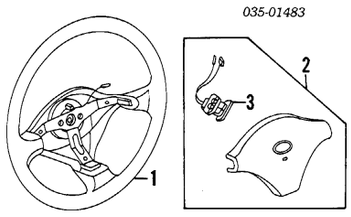

035-01483

| | | |
|---|---|---|
| **1 Wheel, Steering** | | |
| w/Cruise Control | | EA02-32-980A |
| w/o Cruise Control | | EA01-32-980A |
| **2 Pad Assy, Horn** | | |
| w/Cruise Control | | EA02-32-800A |
| w/o Cruise Control | | EA01-32-800 |
| **3 Switch, Cruise Control¶** | | BR70-66-3D1C |
| *¶Included w/Horn Pad Assy* | | |

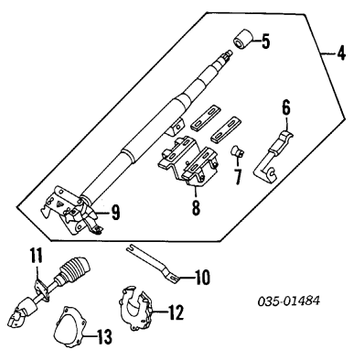


035-01484

| | | |
|---|---|---|
| **4 Column Assy** | | |
| w/Tilt | | BR71-32-100G |
| w/o Tilt | | BR70-32-100E |
| **5 Bushing (Tilt Column)¶** | | B001-32-071 |
| **6 Lever (Tilt Column)¶** | | B456-32-171 |
| **7 Retainer (Tilt Column)¶** | | B456-32-172 |
| **8 Bracket, Upper (Tilt Column)¶** | | BS07-32-175A |
| **9 Bracket, Lower (Tilt Column)¶** | | BR71-32-140 |
| *¶Included w/Column Assy* | | |
| **10 Bracket, Support (Tilt Column)** | | BR71-32-104A |
| **11 Shaft, Lower** | | EA01-32-090B |
| **12 Cover, Lever** | | EA01-32-215A |
| **13 Retainer, Cover** | | BR70-32-210E |

*Illustration Located in Next Column*


| | | |
|---|---|---|
| **14 Switch Assy, Combination** | | |
| Base Model | | EA01-66-120 |
| GS Model | | |
| w/Cruise Control | | EA04-66-120 |
| w/o Cruise Control | | EA02-66-120 |
| **15 Lever, Wiper Switch¶** | | |
| Base Model | | EA01-66-128 |
| GS Model | | EA02-66-128 |
| **16 Switch, Wiper¶** | | EA25-66-135 |
| **17 Switch, Lamp¶** | | EA01-66-122 |

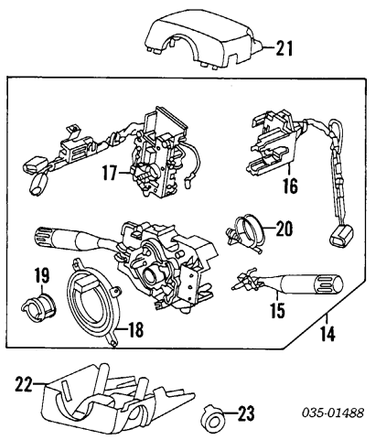

035-01488


| | | |
|---|---|---|
| **18 Ring, Switch¶** | | EA04-66-SP0 |
| **19 Cam, Turn Signal¶** | | |
| w/Cruise Control | | EA04-66-126 |
| w/o Cruise Control | | BR70-66-126 |
| **20 Clamp¶** | | BR70-66-124 |
| *¶Included w/Combination Switch Assy* | | |
| **21 Cover, Upper** | | EA01-60-220A |
| **22 Cover, Lower** | | EA01-60-230A |
| **23 Grommet, Key Cylinder** | | LA01-60-261 |
| **Lock Assy, Ignition** | | |
| Man Trans | | EA01-76-290A |
| Auto Trans | | EA02-76-290A |
| **Switch, Ignition¶** | | B455-66-151A |
| *¶Included w/Ignition Lock Assy* | | |

### 1994-96

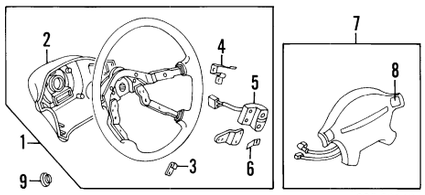

035-02143

| | | |
|---|---|---|
| **1 Wheel Assy, Steering** | | |
| USA | | |
| w/Cruise Control | | BC1E-32-980 |
| w/o Cruise Control | | BC1D-32-980G |
| Canada | | |
| w/Cruise Control | | |
| w/Air Bag | | N.A. |
| w/o Air Bag | | N.A. |
| w/o Cruise Control | | |
| w/Air Bag | | N.A. |
| w/o Air Bag | | N.A. |
| **2 Cover, Wheel¶** | | BC1D-32-049 |
| **3 Bracket, Upper¶** | | BC1D-32-750 |
| **4 Bracket, Lower¶** | | 9927-60-806 |
| **5 Switch, Cruise Control¶** | | BC1E-66-3D1A |
| **6 Clip, Switch¶** | | 2667-15-303A |
| *¶Included w/Steering Wheel Assy* | | |
| **7 Module, Air Bag-See Air Bag System Section** | | |
| **Clockspring-Serviced w/Combination Switch** | | |
| **8 Switch, Horn-See Air Bag System Section** | | |
| **9 Cap** | | BC1D-32-9L1 |

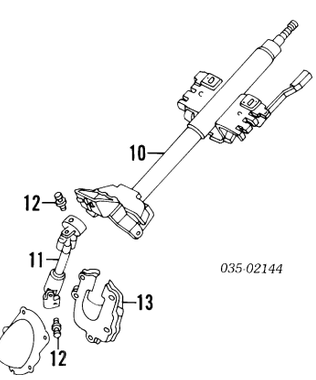


035-02144

| | | |
|---|---|---|
| **10 Column** | | |
| USA | | EA70-32-100B |
| Canada | | |



**Labor Times Shown are for Replacement with New OEM Undamaged Parts on New Undamaged Vehicles.**
**Comments or suggestions? Need assistance? Call 1-800-854-7030 or 858-578-6550. Ext. 8220. Fax 1-888-256-7969 or 858-549-0629.**

| | | |
|---|---|---|
| | w/Air Bag | N.A. |
| | w/o Air Bag | N.A. |
| 11 | **Shaft, Lower** | |
| | USA | EA70-32-090 |
| | Canada | |
| | w/Air Bag | N.A. |
| | w/o Air Bag | N.A. |
| 12 | **Bolt, Shaft (2)** | B455-32-099A |
| 13 | **Cover, Lever** | EA01-32-215A |
| 14 | **Retainer, Cover** | BR70-32-210E |

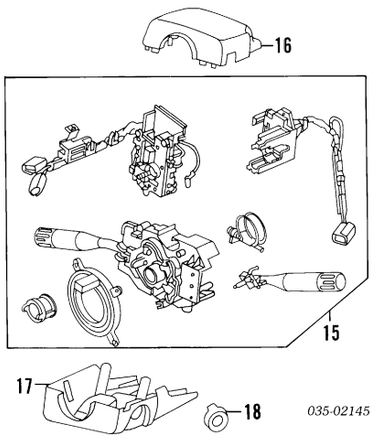


| | | |
|---|---|---|
| 15 | **Switch, Combination** | |
| | Base Model | EA71-66-120B |
| | GS Model | EA70-66-120B |
| 16 | **Cover, Upper** | BC1D-60-221A |
| 17 | **Cover, Lower** | BC1D-60-230A |
| 18 | **Grommet, Key Cylinder** | LA01-60-261 |
| | **Lock Assy, Ignition** | |
| | USA | |
| | Man Trans | EA70-76-290C |
| | Auto Trans | EA71-76-290C |
| | Canada | |
| | Man Trans | |
| | w/Air Bag | N.A. |
| | w/o Air Bag | N.A. |
| | Auto Trans | |
| | w/Air Bag | N.A. |
| | w/o Air Bag | N.A. |
| | **Switch, Ignition¶** | |
| | USA | FD01-66-151A |
| | Canada | |
| | w/Air Bag | N.A. |
| | w/o Air Bag | N.A. |

*¶Included w/Ignition Lock Assy*


## ENGINE/TRANS

| | | | |
|---|---|---|---|
| | **Pulley, Crankshaft** | | |
| | 4 Cyl | 92-93 | B587-11-401A |
| | | 94-96 | B6BF-11-401A |
| | 6 Cyl | | K801-11-400B |
| | **Cover, Timing** | | |
| | 4 Cyl | | |
| | 1992-93 | | |
| | Upper (Assy) | | B630-10-510B |
| | Lower (Assy) | | B630-10-500D |
| | 1994-96 | | |
| | Upper | | B6BF-10-511A |
| | Center | | B6BF-10-521 |
| | Lower | | B660-10-501E |
| | 6 Cyl | R | KL01-10-500E |
| | | L | KL01-10-510C |
| | **Seal, Timing Cover** | | |
| | 4 Cyl | | |
| | Upper | | |
| | 1992-93 (a) | | B630-10-512A |
| | 1994-96 | | B6BF-10-540B |
| | Lower | | |
| | 1992-93 (b) | | B630-10-502B |
| | 1994-96-Serviced w/Lower Timing Cover Assy | | |
| | 6 Cyl | | KL01-10-530F |
| | *(a) Included w/Upper Timing Cover Assy* | | |
| | *(b) Included w/Lower Timing Cover Assy* | | |
| | **Pan, Eng Oil** | | |
| | 4 Cyl | 92-93 | B366-10-400A |
| | | 94-96 | B6BF-10-400A |
| | 6 Cyl | | KL01-10-400 |
| | **Sealant, Eng Oil Pan** | | 8527-77-739 |

## ENGINE/TRANS MOUNTS

*Illustration Located in Next Column*


| | | |
|---|---|---|
| | **Mount, Eng Upper** | |
| 1 | 4 Cyl | |
| | 1992-93 | BR70-39-060B |
| | 1994-96 | |

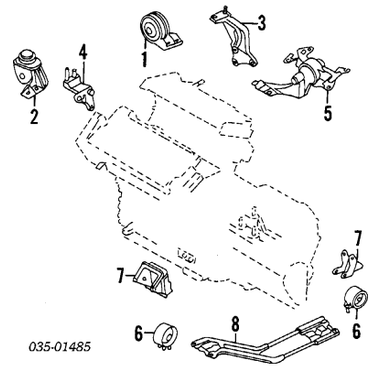


| | | |
|---|---|---|
| | Man Trans | B456-39-040C |
| | Auto Trans | EA76-39-060 |
| 2 | 6 Cyl | EA03-39-060A |
| | **Bracket, Eng Upper** | |
| 3 | 4 Cyl | 92-93 B461-39-030C |
| | | 94-96 BC1D-39-030D |
| 4 | 6 Cyl | EA03-39-030 |
| 5 | **Mount, Trans Upper** | |
| | 4 Cyl | |
| | Man Trans | B596-39-100B |
| | Auto Trans | B599-39-100A |
| | 6 Cyl | |
| | Man Trans | EA03-39-100B |
| | Auto Trans | 92-93 EA04-39-100C |
| | | 94 EA71-39-100A |
| 6 | **Mount, Eng Lower** | |
| | 4 Cyl | |
| | 1992-93 | R B456-39-040C |
| | | L B455-39-050B |
| | 1994-96 | |
| | Man Trans | R B456-39-040C |
| | | L B455-39-050B |
| | Auto Trans | R EA77-39-040A |
| | | L EA77-39-050 |
| | 6 Cyl | R EA03-39-040 |
| | | L EA03-39-050 |
| 7 | **Bracket, Eng Lower** | |
| | Man Trans | |
| | 4 Cyl | R B455-39-010B |
| | | L B455-39-020A |
| | 6 Cyl | R BR74-39-010C |
| | | L EA03-39-020A |
| | Auto Trans | R B458-39-010F |
| | | L EA03-39-020A |
| 8 | **Member, Eng Mounting** | |
| | 4 Cyl | B455-39-800D |
| | 6 Cyl | EA03-39-800C |


## AIR CLEANER

### 4 CYL

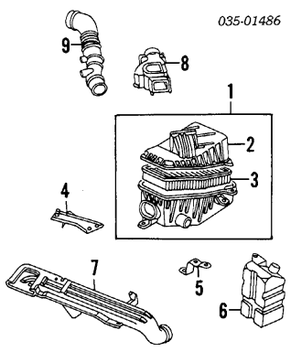


| | | | |
|---|---|---|---|
| 1 | **Cleaner Assy, Air** | 92-93 | B66S-13-320 |
| | | 94-96 | B6CK-13-320 |
| 2 | **Cover, Air Cleaner¶** | 92-93 | B66S-13-Z01 |
| | | 94-96 | B6CK-13-Z01 |
| 3 | **Element, Air Cleaner¶** | | K801-13-Z40-9U |
| | *¶Included w/Air Cleaner Assy* | | |
| 4 | **Bracket, Front** | | K801-20-210 |
| 5 | **Bracket, Rear** | | K801-20-220 |
| 6 | **Resonator** | | K801-13-19XB |
| 7 | **Duct, Air Intake¶** | 92-93 | K801-13-200C |
| | | 94-96 | K834-13-200B |
| | *¶Add'l Parts &/or Dealer Contact Required* | | |
| 8 | **Meter, Air Flow** | 92-93 | B6S7-13-210R-0A |
| | | 94-96 | B6BF-13-215 |
| 9 | **Hose, Air Flow Meter** | 92-93 | B66S-13-220 |
| | | 94-96 | B6BF-13-220C |

### 6 CYL

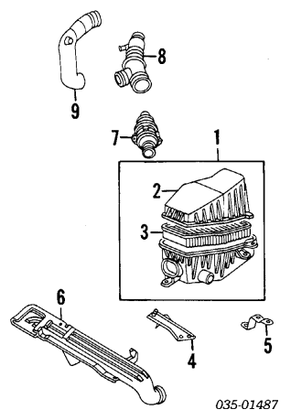


| | | | |
|---|---|---|---|
| 1 | **Cleaner Assy, Air** | 92-93 | K801-13-320C |
| | | 94 | K834-13-320 |
| 2 | **Cover, Air Cleaner¶** | 92-93 | K801-13-Z01 |
| | | 94 | K834-13-Z01 |
| 3 | **Element, Air Cleaner¶** | | K801-13-Z40-9U |
| | *¶Included w/Air Cleaner Assy* | | |
| 4 | **Bracket, Front** | | K801-20-210 |
| 5 | **Bracket, Rear** | | K801-20-220 |
| 6 | **Duct, Air Intake** | 92-93 | K801-13-200C |
| | | 94 | K834-13-200B |
| 7 | **Meter, Air Flow** | | JE50-13-210R-00 |
| 8 | **Hose, Air Flow Meter** | | K801-13-220D |
| 9 | **Duct, Resonator** | 92-93 | K801-13-18XA |
| | | 94 | K834-13-18X |

## EXHAUST

| | | | |
|---|---|---|---|
| | **Manifold, Exhaust** | | |
| | 4 Cyl | 92-93 | B67K-13-450A |
| | | 94-96 | B6CK-13-451A |
| | 6 Cyl | R | KL01-13-4F0B |
| | | L | K802-13-450C |
| | **Shield, Heat** | | |
| | 4 Cyl | 92-93 | B67K-13-390B |
| | | 94-96 | B6CK-13-390D |
| | 6 Cyl | | |
| | 1992-93 | R | KL02-13-390A |
| | | L | KL02-13-390A |
| | 1994 | | |
| | w/Calif Emission | R | KL50-13-3K0A |
| | | L | KL50-13-390A |
| | w/o Calif Emission | R | KL02-13-390A |
| | | L | KL02-13-390A |
| | **Pipe, Front Exhaust** | | |
| | 4 Cyl | 92-93 | BP04-40-500B |
| | | 94-96 | B6H7-40-500C |
| | 6 Cyl | | |
| | 1992-93 | | K801-40-500B |
| | 1994 | | |
| | w/Calif Emission | | K817-40-500 |
| | w/o Calif Emission | | K801-40-500B |
| | **Converter, Catalytic** | | |
| | 4 Cyl | | |
| | 1992-93 | | B69T-20-600A |
| | 1994-96 | | |
| | w/Calif Emission | | B6DE-20-600B |
| | w/o Calif Emission | | B6DC-20-600C |
| | 6 Cyl | | |
| | 1992-93 | | K802-20-600 |
| | 1994 | | |
| | w/Calif Emission | | K834-20-600 |
| | w/o Calif Emission | | K802-20-600 |
| | **Resonator** | | |
| | 4 Cyl | 92-93 | B685-40-300B |
| | | 94-96 | B6G3-40-300C |
| | 6 Cyl | | K804-40-300D |
| | **Muffler** | | |
| | 4 Cyl | 92-93 | B6E5-40-100A |
| | | 94-96 | B6G2-40-100A |
| | 6 Cyl | | |
| | Man Trans | | K801-40-100D |
| | Auto Trans | | K801-40-100D |

## EMISSION SYSTEM

| | | |
|---|---|---|
| | **Canister, Vapor** | BP01-13-970 |
| | **Bracket, Vapor Canister** | B6S7-13-961 |
| | **Valve, EGR** | |
| | 4 Cyl | B6BF-20-300 |
| | 6 Cyl | K801-20-300A |
| | **Solenoid, EGR Control¶** | |
| | 4 Cyl | B6BF-18-74X |
| | 6 Cyl | 92-93 K801-18-740 |
| | | 94 K801-20-300A |
| | *¶Add'l Parts &/or Dealer Contact Required* | |
| | **Control Unit, EFI¶** | |
| | 4 Cyl | |
| | 1992-93 | |
| | Man Trans | B66S-18-881R |
| | Auto Trans | B66T-18-881R |

## EMISSION SYSTEM Cont'd

1994-96
Man Trans ZPB9-18-881R
Auto Trans ZPC0-18-881R
6 Cyl 92-93 K801-18-881R
94 ZPC3-18-881R
*¶Remanufactured Part. Contact Dealer for Core Charge & Exchange Information*

# ELECTRICAL

## ALTERNATOR

**Alternator Assy¶**
4 Cyl 92-93 B66S-18-300R-00
94-96 Z505-18-300R-00
6 Cyl KL11-18-300R-00
*¶Remanufactured Part. Contact Dealer for Core Charge & Exchange Information*
**Pulley, Alternator¶**
4 Cyl B3C7-18-W10
6 Cyl K801-18-W11
*¶Included w/Alternator Assy*
**Bracket, Alternator Mount**
4 Cyl-Serviced w/Eng Upper Bracket
6 Cyl KL05-18-371B
**Bracket, Alternator Adjust**
4 Cyl BP01-18-361
6 Cyl KL01-18-360
**Belt, Drive**
4 Cyl B6BF-18-381-9U
6 Cyl K805-18-381B

## BATTERY

**Battery¶** 0000-80-0035-WB
*¶Order by Application*


## HORN

**Horn** FB03-66-790A

## IGNITION/FUEL


**Coil, Ignition** B6S7-18-10XA
**Module, Control¶**
4 Cyl EA01-67-580
6 Cyl EA02-67-580
*¶Order by Application*

# WINDSHIELD

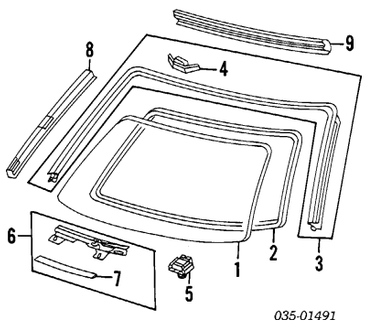



1 **Glass, Windshield**
Mazda
Base Model EA01-63-901A
GS Model EA02-63-901A
2 **Dam, Windshield**
3120mm B481-50-894
3880mm J001-50-899A
4500mm GA7B-50-895
3 **Moulding Assy, Surround** E040-50-601B
4 **Clip, Moulding¶** R GA7B-50-6A6
L GA7B-50-6A7
*¶Included w/Surround Moulding Assy*
5 **Spacer** R/L B455-50-891A
6 **Retainer Assy, Glass** R EA01-50-G3X
L EA01-50-G3Y
7 **Seal, Retainer¶-Serviced w/Glass Retainer Assy**
*¶Included w/Glass Retainer Assy*
8 **Protector, Moulding Side** R/L GA2A-50-6B2
9 **Protector, Moulding Upper**
To 8-1-91 GA2A-50-6B1
From 8-1-91 E016-50-6B1
**Moulding, Inside Garnish**
1992-93¶ R EA01-68-160A-06
L EA01-68-170A-06
1994-96 R EA17-68-160-06
L EA17-68-170-06
*¶Gray listed, Order by Application*
*06 Gray; 28 Taupe*
**Mirror, Rear View** EA01-69-220
**Cover, Mirror** M001-69-225A-00
**Visor, Sun¶**
w/Sunroof 92-93 R EA05-69-270C-07
L EA05-69-320C-07
94-96 R EA21-69-270C-07
L EA72-69-320-07
w/o Sunroof 92-93 R EA01-69-270C-07
L EA01-69-320C-07
94-96 R EA17-69-270C-07
L EA70-69-320-07
*¶Gray listed, Order by Application*
*07 Gray; 28 Taupe*

## WIPER SYSTEM

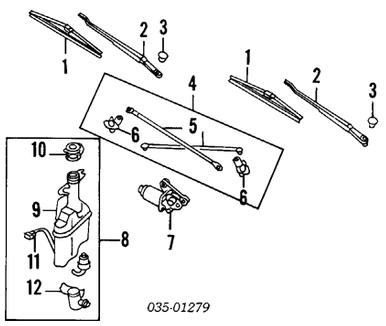


1 **Blade, Wiper** R NC11-67-330-9U
L BJ0E-67-330-9U
2 **Arm, Wiper** R EA02-67-321
L EA01-67-321
3 **Cap, Wiper Arm** R/L LA01-67-395C
4 **Link Assy, Wiper** EA01-67-360B
5 **Arm, Wiper Link¶** R BS34-67-362
L BS34-67-361
6 **Pivot, Wiper¶** R EA02-67-363A
L BR71-67-364
*¶Included w/Wiper Link Assy*
7 **Motor, Wiper** EA25-67-340
8 **Tank Assy, Washer** B455-67-480A
9 **Tank, Washer¶** B455-67-481A
10 **Cap, Tank¶** B455-67-483
11 **Pump, Washer¶** S084-76-672
12 **Switch, Level¶-Not Serviced**
*¶Included w/Washer Tank Assy*
**Nozzle, Washer** R/L GA6B-67-510

# COWL & DASH

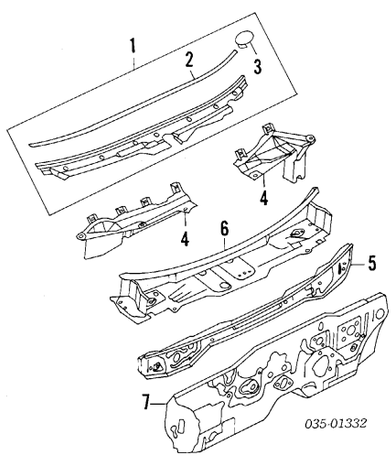



1 **Grille Assy, Cowl** EA01-50-790C
2 **Protector, Grille¶** EA01-50-794A
3 **Cap¶ (3)** M001-50-795B
*¶Included w/Cowl Grille Assy*
4 **Plate, Baffle** R BS34-56-191A
L BS34-56-192A
5 **Panel, Cowl Front** B481-70-62YC
6 **Panel, Dash Upper** 92-93 EA01-53-510D
94-96 EA70-53-510
7 **Panel, Dash Lower** 92-93 EA01-53-400
94-96 EA70-53-400B

# INSTRUMENT PANEL

## 1992-93


*Illustration Located in Next Column*

1 **Panel, Instrument¶** BS34-60-350H-02
2 **Garnish, Upper** EA01-60-720A-02

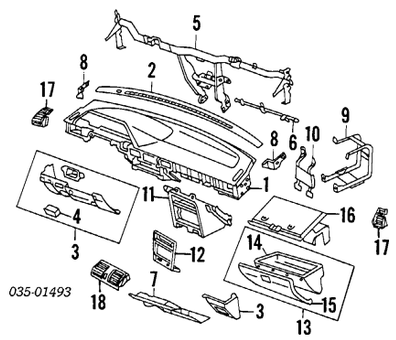


3 **Pad Assy, Lower** EA01-64-280-02
4 **Louver, Lower Pad¶ (a)** FB01-64-850
*¶Black listed, Order by Application*
*02 Black; 26 Taupe*
*(a) Included w/Lower Pad Assy*
5 **Crossmember, Inst Panel** EA01-60-420E
6 **Reinforcement, Inst Panel** BR70-60-430
7 **Cover, Under Dash** BR70-64-520A
8 **Bracket, Inst Panel** R BR70-60-56X
L BR70-60-58X
9 **Frame, Upper** BR70-60-610
10 **Frame, Lower** BR70-60-620
11 **Panel, Center Lower¶** EA01-64-270A-02
*¶Black listed, Order by Application*
*02 Black; 26 Taupe*
12 **Panel, Finish** EA01-55-210A
13 **Glove Box Assy¶** BR70-64-030A-02
*¶Black listed, Order by Application*
*02 Black; 26 Taupe*
14 **Glove Box (a)** BR70-64-161A
15 **Lid, Glove Box (a)** BR70-64-041-02
*(a) Included w/Glove Box Assy*
16 **Cover, Glove Box** BR70-64-110
17 **Grille, Vent Side¶** R B481-64-730A-00
L B481-64-830A-00
18 **Grille, Vent Center¶** B481-64-930B-00
*¶Black listed, Order by Application*
*00 Black; 26 Taupe*

## 1994-96

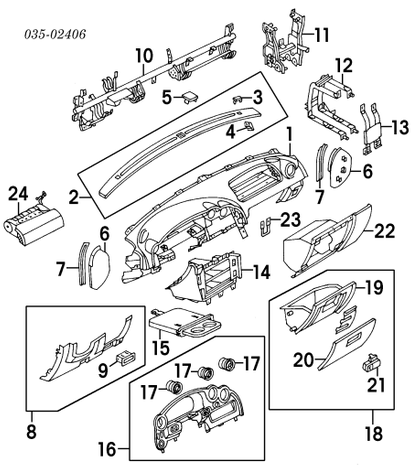



1 **Panel, Instrument**
USA EA70-60-350E
Canada
w/Air Bag N.A.
w/o Air Bag N.A.
2 **Garnish Assy, Upper** EA01-60-720A-02
3 **Cover, Hole¶** B455-60-731-02
4 **Spring¶ (11)** H260-64-343
*¶Included w/Upper Garnish Assy*
5 **Cover, Center Hole** EA01-55-574-02
6 **Panel, Side** R EA70-64-950B
L EA70-64-960B
7 **Cover, Side Panel** R B481-64-912A
L B481-64-922A
8 **Pad Assy, Lower** EA71-64-280
9 **Louver, Lower Pad¶** BC1D-64-293A
*¶Included w/Lower Pad Assy*
10 **Crossmember, Inst Panel**
USA EA70-60-420B
Canada
w/Air Bag N.A.
w/o Air Bag N.A.
11 **Bracket, Right Side** EA70-60-450B
12 **Frame, Upper** BR70-60-610


**Labor Times Shown are for Replacement with New OEM Undamaged Parts on New Undamaged Vehicles.**
**Comments or suggestions? Need assistance? Call 1-800-854-7030 or 858-578-6550. Ext. 8220. Fax 1-888-256-7969 or 858-549-0629.**

13 **Frame, Lower** BR70-60-620
14 **Panel, Center Lower** EA70-64-270B
15 **Holder, Cup** BC1D-64-39XC
16 **Hood Assy, Meter** EA70-55-420A
17 **Grille, Ventilator¶ (3)** EA71-64-930
*¶Included w/Meter Hood Assy*
18 **Glove Box Assy** EA70-64-030E-02
19 **Glove Box¶** EA70-64-030E-02
20 **Lid, Glove Box¶** EA70-64-041A
21 **Lock, Glove Box¶** BC1D-64-090C-02
*¶Included w/Glove Box Assy*
22 **Cover, Glove Box** EA70-64-260C
23 **Striker, Glove Box** BC1D-64-101
24 **Module, Air Bag-See Air Bag System Section**


## CENTER CONSOLE

### 1992-93

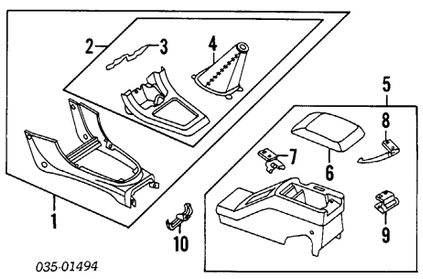


1 **Console Assy, Front¶**
Man Trans EA01-64-320A-02
Auto Trans B482-64-320E-02
*¶Black listed, Order by Application*
*02 Black; 26 Taupe*
2 **Panel Assy, Center (a)**
Man Trans EA01-55-220A
Auto Trans B482-55-220E
3 **Plate (a) (b) (2)** FC01-55-257
4 **Boot, Shift (a) (b)**
Man Trans EA01-64-330A
*(a) Included w/Front Console Assy*
*(b) Included w/Center Panel Assy*
5 **Console Assy, Rear (a)** EA01-64-420E-02
6 **Lid, Console¶ (a)** EA01-64-450B-02
7 **Lock, Console¶ (a)** EA01-64-45YB-00
8 **Limiter, Lid¶ (a)** EA25-64-45ZC
9 **Hinge, Lid¶ (a)** EA01-64-45XB-00
*¶Included w/Rear Console Assy*
*(a) Black listed, Order by Application*
*00 Black; 26 Taupe*
10 **Bracket, Console** B455-64-326


### 1994-96

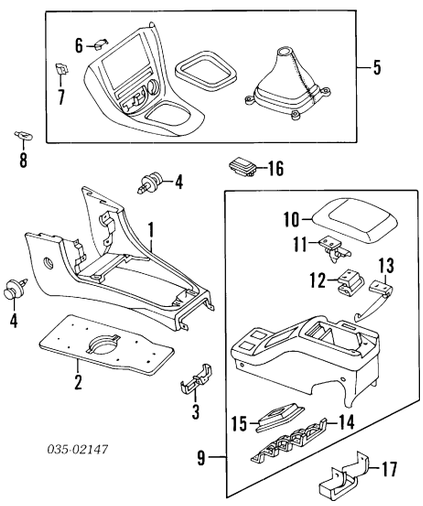



1 **Console, Front** EA70-64-320A
2 **Insulator, Console**
Man Trans B455-68-643B
3 **Bracket, Front Console** B455-64-326
4 **Fastener, Front Console** R/L GJ21-68-885B-02
5 **Panel Assy, Center**
Man Trans EA70-55-210A
Auto Trans EA71-55-210A
**Spring, Center Panel¶**
6 Type A J001-55-219
7 Type B
Man Trans (6) GA2A-64-343B
Auto Trans (8) GA2A-64-343B
*¶Included w/Center Panel Assy*
8 **Bulb, Center Panel** 0000-11-0074
9 **Console Assy, Rear** EA25-64-420C-02
10 **Lid, Console¶** EA01-64-450B-02
11 **Lock, Console Lid¶** EA01-64-45YB-00
12 **Hinge, Lid¶** EA01-64-45XB-00
13 **Stopper, Lid¶** EA25-64-45ZC-00
14 **Plate, Lid¶** EA25-64-433
15 **Boot, Rear Console¶** EA25-64-432
*¶Included w/Rear Console Assy*
16 **Cover, Hole** G188-55-225A
17 **Bracket, Rear Console** EA25-64-426

## ROCKER/PILLARS/FLOOR

### SHEET METAL

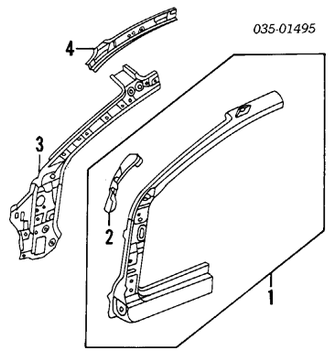



1 **Pillar Assy, Outer Hinge** R EAY1-70-210A
L EAY1-71-210A
2 **Brace, Pillar¶** R EA01-70-290
L EA01-71-290
*¶Included w/Outer Hinge Pillar Assy*
3 **Pillar, Inner Hinge** R EAY1-70-24X
L EAY1-71-24X
4 **Rail, Roof-See Roof Section Antenna** 0000-81-930B-CR

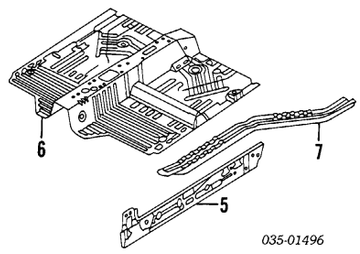



5 **Panel, Inner Rocker** R EA01-53-950B
L EA01-54-950B
6 **Pan, Front Floor** 92-93 BR70-53-600D
94-96 EA70-53-600
7 **Rail, Front** 92-93 R BR70-53-660C
L BR70-54-660B
94-96 R EA01-53-660
L EA01-54-660

### INTERIOR TRIM

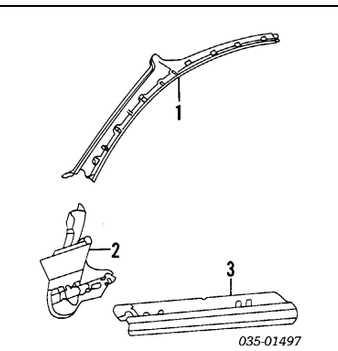


1 **Mldg, Inside Garnish-See Windshield Section**
2 **Panel, Side Kick** R EA01-68-371A-02
L EA01-68-391A-02
3 **Plate, Scuff** R/L EA01-68-710A-02

## FRONT SEAT

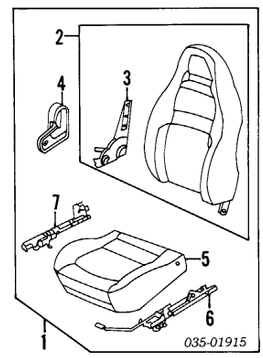



1 **Seat Assy¶**
USA
4 Cyl 92-93 R EA01-57-100J-02
L EA01-57-150G-02
94-95 R EA70-57-100B-02
L EA70-57-150B-02
6 Cyl
1992-93 R EA03-57-100H-02
L EA03-57-150F-02
1994 R EA71-57-100B
L EA71-57-150B
Canada
1992-93
Base Model R/L N.A.
GS Model R/L N.A.
2 **Back Assy, Seat¶ (b)**
USA
4 Cyl 92-93 R EA01-88-130C-02
L EA01-88-180C-02
94-95 R EA71-88-130-02
L EA71-88-180-02
6 Cyl R EA70-88-130-02
L EA70-88-180-02
Canada
1992-93
Base Model R/L N.A.
GS Model R/L N.A.
1994
4 Cyl R EA71-88-130-02
L EA71-88-180-02
6 Cyl R EA70-88-130-02
L EA70-88-180-02
1995-96 R EA71-88-130-02
L EA71-88-180-02
*¶Black/Blue listed, Order by Application*
*02 Black/Blue; 26 Dark Taupe*
3 **Adjuster, Recline (a) (b)**
1992-93 R EA01-88-101
L BR70-88-151
1994-96 R EA70-88-101
L EA70-88-155
*(a) Included w/Seat Back Assy*
4 **Cover, Adjuster¶ (b)** R BR70-88-127B-02
L BR70-88-177B-02
5 **Cushion Assy, Seat¶ (b)**
USA
4 Cyl 92-93 R EA01-88-110A-02
L EA01-88-160A-02
94-95 R EA71-88-110-02
L EA71-88-160-02
6 Cyl 92-93 R EA03-88-110-02
L EA03-88-160-02
94 R EA70-88-110-02
L EA70-88-160-02
Canada
1992-93
Base Model R/L N.A.
GS Model R/L N.A.
1994
4 Cyl R EA71-88-110-02
L EA71-88-160-02
6 Cyl R EA70-88-110-02
L EA70-88-160-02
1995-96 R EA71-88-110-02
L EA71-88-160-02
*¶Blue/Black listed, Order by Application*
*02 Blue/Black; 26 Dark Taupe*
6 **Adjuster, Outer Slide (b)**
1992-93 R EA01-88-152
L EA03-88-103
1994-96 R E040-88-152
L EA71-88-103
7 **Adjuster, Inner Slide (b)**
1992-93 R EA01-88-153
L EA03-88-102
1994-96 R EA70-88-153
L EA71-88-102
*(b) Included w/Seat Assy*

## REAR SEAT

## SEAT BELTS


### FRONT
### USA 1992-93

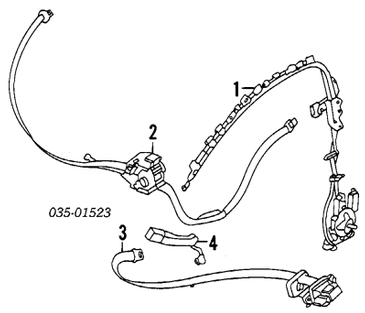


| | | | |
|---|---|---|---|
| 1 | **Retractor, Shoulder Belt** | R | EA01-57-930D |
| | | L | EA01-57-990D |
| 2 | **Belt Set, Shoulder¶** | | EA01-57-920B-00 |
| 3 | **Belt, Lap¶** | R | EA01-57-940A-00 |
| | | L | EA01-57-980A-00 |
| 4 | **Buckle, Lap Belt¶** | R | EA01-57-620A-00 |
| | | L | EA01-57-680A-00 |


*¶Black listed, Order by Application*
*00 Black; 27 Taupe*

### FRONT
### USA 1994-95
### CANADA 1992-96

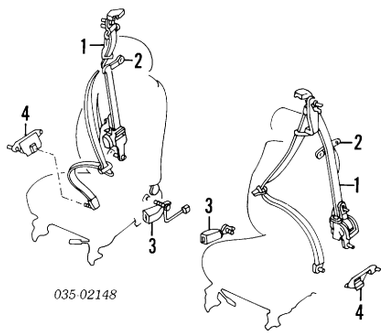


| | | | |
|---|---|---|---|
| 1 | **Belt, Seat** | R | EA70-57-630D-00 |
| | | L | EA70-57-690E-00 |
| 2 | **Plate, Seat Belt** | R/L | BJ83-57-985A |
| 3 | **Buckle, Seat Belt** | R | E040-57-620C |
| | | L | E040-57-680A |
| 4 | **Bracket, Seat Belt** | R/L | EA70-57-925A |

### REAR

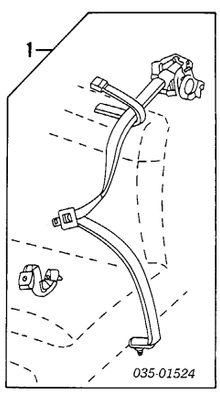


| | | | |
|---|---|---|---|
| 1 | **Belt, Rear Seat¶** | 92-93 R | EA01-57-710-02 |
| | | L | EA70-57-770A-02 |
| | | 94-95 R | EA70-57-710B-02 |
| | | L | EA70-57-770A-02 |

*¶Black listed, Order by Application*
*02 Black; 27 Taupe*

| | | | |
|---|---|---|---|
| | **Bracket, Seat Belt** | R | EA01-57-71X |
| | | L | EA01-57-78X |


## FRONT DOOR

### SHEET METAL

| | | | |
|---|---|---|---|
| | **Shell Assy, Door** | R | EAY1-58-020A |
| | | L | EAY1-59-020A |
| | **Panel, Door Repair¶** | R | EA01-58-031D |
| | | L | EA01-59-031D |

*¶Included w/Door Shell Assy*

### EXTERIOR TRIM

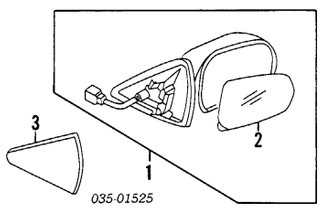


| | | | |
|---|---|---|---|
| 1 | **Mirror Assy, Rear View¶** | R | EA01-69-120B-PZ |
| | | L | EA01-69-180B-PZ |


*¶Black listed, Order by Application*
*D2 Creek Blue MC; J4 Passion Rose;*
*PT Chaste White; PZ Brilliant Black;*
*SQ Blaze Red; UF Clear White;*
*Z1 Bluish Green Metallic; 3L Silver Stone Metallic*
*4R Passion Yellow Mica; 6C Mighty Gray;*
*6M Elegant Beige; 6V Raspberry Metallic*

| | | | |
|---|---|---|---|
| 2 | **Glass, Mirror (a)** | R | EA01-69-123 |
| | | L | DB18-69-183 |

*(a) Included w/Rear View Mirror Assy*

| | | | |
|---|---|---|---|
| 3 | **Garnish, Interior** | R | EA01-69-111B |
| | | L | EA01-69-123 |

### INTERIOR TRIM

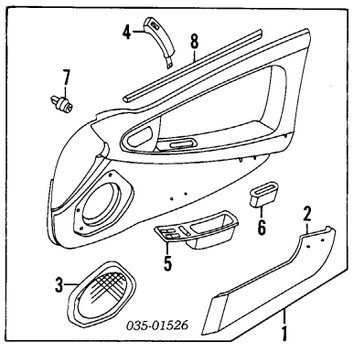


| | | | |
|---|---|---|---|
| 1 | **Panel Assy, Trim¶** | | |
| | 1992-93 | R | EA03-68-420F-02 |
| | | L | EA03-68-450G-02 |
| | 1994-96 | | |
| | w/Pwr Windows | R | EA70-68-420B-02 |
| | | L | EA70-68-450B-02 |
| | w/o Pwr Windows | R | EA71-68-420B-02 |
| | | L | EA71-68-450B-02 |
| 2 | **Pocket, Door¶ (a)** | R | EA01-68-4C1A-02 |
| | | L | EA01-68-4N1A-02 |
| 3 | **Grille, Speaker¶ (a)** | R | EA01-68-4H0-02 |
| | | L | EA01-68-4W0-02 |

*¶Black listed, Order by Application*
*02 Black; 26 Dark Taupe*

| | | | |
|---|---|---|---|
| 4 | **Handle, Right Pull (a)** | | EA01-68-D60A-00 |
| | **Bezel, Left Pull (a)** | | |
| 5 | w/Pwr Windows | | EA01-68-4L6-00 |
| 6 | w/o Pwr Windows | | LA01-68-D71-00 |
| 7 | **Clip, Panel (a) (8/Side)** | R/L | G350-68-AB1 |
| 8 | **Weatherstrip, Inner (a)** | R | EA01-58-821 |
| | | L | EA01-59-821 |


*(a) Included w/Trim Panel Assy*

| | | | |
|---|---|---|---|
| | **Speaker, Radio** | R/L | 0000-81-102B |

### HARDWARE

*Illustration Located in Next Column*

| | | | |
|---|---|---|---|
| 1 | **Latch, Door** | | |
| | w/Pwr Locks | 92-93 R | EA03-58-310B |
| | | L | EA03-59-310C |
| | | 94-96 R | EA19-58-310C |
| | | L | EA19-59-310D |
| | w/o Pwr Locks | 92-93 R | EA01-58-310B |
| | | L | EA01-59-310A |
| | | 94-96 R | EA17-58-310C |
| | | L | EA17-59-310D |

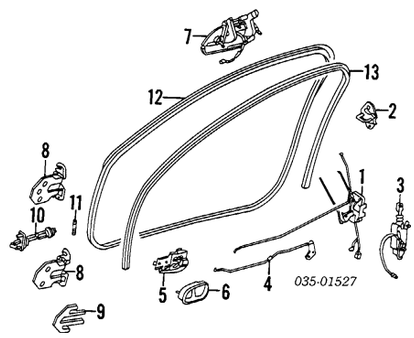



| | | | |
|---|---|---|---|
| 2 | **Striker** | R/L | B092-58-361A |
| 3 | **Actuator, Pwr Lock** | R | EA03-58-350A |
| 4 | **Pivot, Lock** | R | EA01-58-39YA |
| | | L | EA01-59-39YA |
| 5 | **Handle, Inner** | R | EA01-58-330E-02 |
| | | L | EA01-59-330F-02 |
| 6 | **Bezel, Inner Handle** | R | EA01-58-303-02 |
| | | L | EA01-59-303-02 |
| 7 | **Handle, Outer¶** | R | GA5R-58-410G-PZ |
| | | L | EA01-59-410G-PZ |

*¶Black listed, Order by Application*
*D2 Creek Blue MC; J4 Passion Rose;*
*PT Chaste White; PZ Brilliant Black;*
*SQ Blaze Red; UF Clear White;*
*Z1 Bluish Green Metallic; 3L Silver Stone Metallic*
*4R Passion Yellow Mica; 6C Mighty Gray;*
*6M Elegant Beige; 6V Raspberry Metallic*
*29 Sparkle Green M.*

| | | | |
|---|---|---|---|
| 8 | **Hinge, Door** | | |
| | Upper | R | H432-58-210A |
| | | L | H432-59-210A |
| | Lower | R | EA01-58-240C |
| | | L | EA01-59-240C |
| 9 | **Shim, Hinge** | R/L | B092-58-201A |
| 10 | **Check, Door** | R/L | EA01-58-270B |
| 11 | **Pin, Check** | 92-93 R/L | B455-58-265 |
| | | 94-96 R/L | BC1D-58-265 |
| 12 | **Weatherstrip, Door** | R | EA01-58-760D |
| | | L | EA01-59-760D |
| 13 | **Welt, Door¶** | R | EA01-68-911B-02 |
| | | L | EA01-68-912B-02 |

*¶Black listed, Order by Application*
*02 Black; 26 Taupe*

### GLASS & PARTS

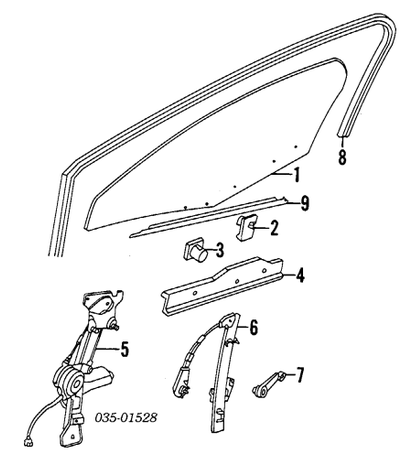


| | | | |
|---|---|---|---|
| 1 | **Glass, Front Door** | | |
| | Mazda | R | EA01-58-511A |
| | | L | EA01-59-511A |
| 2 | **Grommet (2/Side)** | R/L | EA01-58-502 |
| 3 | **Clip, Holder (2/Side)** | R/L | DA97-58-514A |
| 4 | **Holder, Glass** | R | EA01-58-512 |
| | | L | EA01-59-512 |
| 5 | **Regulator, Power¶** | R | EA05-58-560D |
| | | L | EA05-59-590A |
| 6 | **Regulator, Manual** | R | EA01-58-560B |
| | | L | EA01-59-560B |

*¶Add'l Parts &/or Dealer Contact Required*


| | | | |
|---|---|---|---|
| 7 | **Handle, Regulator** | 92-93 R/L | B092-58-580-00 |
| | | 94-96 R/L | S084-58-580A-00 |
| 8 | **Run, Glass** | R | EAY1-58-60X |
| | | L | EAY1-59-60XA |
| 9 | **Moulding, Belt** | R | EA01-50-640C |
| | | L | EA01-50-650C |



**Labor Times Shown are for Replacement with New OEM Undamaged Parts on New Undamaged Vehicles.**
**Comments or suggestions? Need assistance? Call 1-800-854-7030 or 858-578-6550. Ext. 8220. Fax 1-888-256-7969 or 858-549-0629.**

## ROOF


### SHEET METAL

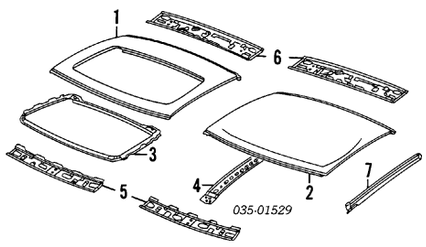


**Panel, Roof**
1 w/Sunroof — EA05-70-601G
2 w/o Sunroof — EA01-70-601F
**Reinforcement, Roof**
3 w/Sunroof — EA05-70-630
4 w/o Sunroof — EA01-70-661A
5 **Panel, Front Header** — EA01-70-640
6 **Panel, Rear Header** — EA01-70-700C
7 **Moulding, Roof**
1992-93¶ — R EA01-50-9H0G-PZ; L EA01-50-9L0G-PZ
1994-96 — R EA02-50-9H0G; L EA02-50-9L0H

*¶Black listed, Order by Application*
*J4 Passion Rose; PZ Brilliant Black; SQ Blaze Red; UF Clear White; Z1 Bluish Green Metallic; 4R Passion Yellow Mica; 6C Mighty Gray; 6M Elegant Beige; 6V Raspberry Metallic*


### INTERIOR TRIM

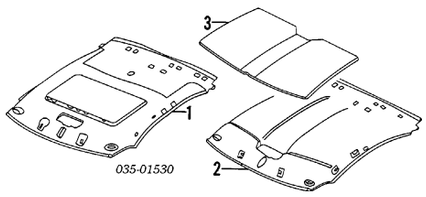



**Headliner¶**
1 w/Sunroof — 92-93 EA05-68-030E-08; 94-96 EA21-68-030E-08
2 w/o Sunroof — 92-93 EA01-68-030E-08; 94-96 EA17-68-030E-08
3 **Insulator, Roof¶** — EA01-68-021
**Holder, Sun Visor¶** — R/L H260-69-261-06
**Hook, Hanger¶** — EA01-69-531A-06

*¶Gray listed, Order by Application*
*06 Gray; 28 Taupe*


### OVERHEAD CONSOLE

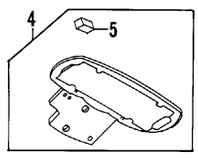

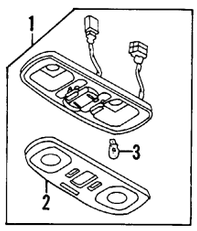1 **Console Assy, Overhead (a)**
w/Sunroof — EA05-69-970C-06
w/o Sunroof — EA01-69-970C-06
*(a) Gray listed, Order by Application*
*06 Gray; 28 Taupe*
2 **Lens¶**
w/Sunroof — EA05-69-973
w/o Sunroof — EA01-69-973
3 **Bulb¶** — 0000-11-0194
*¶Included w/Overhead Console Assy*
4 **Bracket Assy, Console**
w/Sunroof — EA21-69-98X
w/o Sunroof — E016-69-981
5 **Cushion, Brkt¶ (2)** — 92-93 GA2L-69-977A; 94-95 EA21-69-977
*¶Included w/Console Bracket Assy*


## SUNROOF

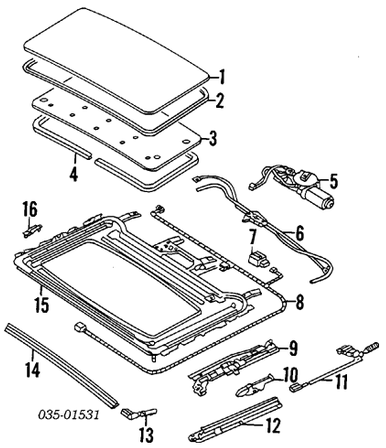


1 **Panel, Sliding** — EA05-69-810A
2 **Weatherstrip**
To 11-1-91 — FB03-69-895C
From 11-1-91 — EA05-69-825
3 **Trim, Sliding Panel¶** — EA05-69-960-08
4 **Welt, Trim¶** — EA05-69-981A-06
*¶Gray listed, Order by Application*
*06 Gray; 08 Gray; 29 Taupe; 34 Taupe*
5 **Motor, Sunroof** — EA05-69-848
6 **Drive Unit, Sunroof** — EA05-69-861
7 **Relay, Motor** — 92-93 J005-69-873; 94 EA05-69-873
8 **Harness, Sunroof** — EA05-69-872
9 **Slide, Sunroof** — R/L E002-69-868-9
10 **Guide, Sunroof** — 92-93 R E002-69-864A; L E002-69-865A; 94-96 R/L EA05-69-864-5
11 **Rail, Closing** — R/L FB03-69-865-6
12 **Rail, Guide** — 92-93 R E002-69-851D; L E002-69-852D; 94-96 R/L EA05-69-851-2
13 **Link, Deflector** — R FB03-69-846B; L FB03-69-847B
14 **Deflector** — FB03-69-845
15 **Frame Assy, Sunroof** — EA05-69-840
16 **Bracket, Side¶ (2/Side)** — R/L FB03-69-849
*¶Included w/Sunroof Frame Assy*

## QUARTER PANEL


### SHEET METAL

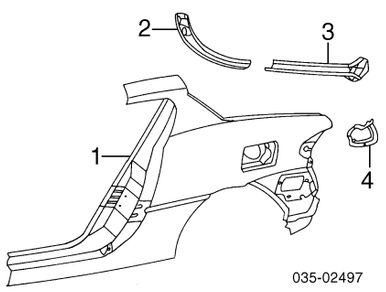


1 **Panel, Outer** — R EAY1-70-40X; L EAY1-71-40X
2 **Rail, Upper** — R EA01-70-442; L EA01-71-442
3 **Rail, Lower** — R EA01-70-44XB; L EA01-71-44XB
4 **Panel, Corner** — R EA01-70-481B; L EA01-71-481B


*Illustration Located in Next Column*

5 **Panel Assy, Inner** — R EA01-70-100A; L EA01-71-100B
6 **Reinf, Inner¶** — R EA01-70-11XE; L EA01-71-11XF

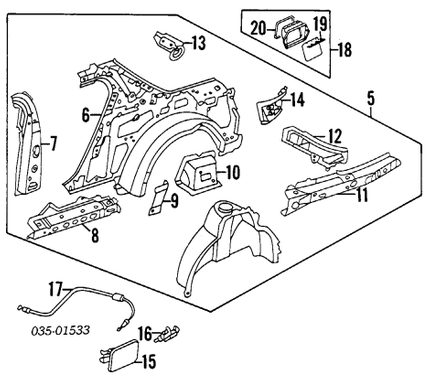


7 **Pillar, Inner¶** — R EAY1-70-140; L EAY1-71-140
8 **Reinf, Side¶** — R EA01-70-130A; L EA01-71-130A
9 **Brace, Wheelhouse¶** — R B455-70-152; L B455-71-152
10 **Reinf, Susp Housing¶** — R EA01-70-121A; L EA01-71-121A
11 **Reinf, Lateral¶** — R EA01-70-A4X; L EA01-71-A4X
12 **Reinf, Upper¶** — R EA01-70-13YB; L EA01-71-13YB
13 **Brace, Stay¶** — R EA01-70-17Y; L EA01-71-17Y
14 **Reinf, Corner Panel¶** — R EA01-70-11Y; L EA01-71-11Y
*¶Included w/Inner Panel Assy*
15 **Lid, Filler** — EA01-42-410
16 **Opener, Lid** — EA01-56-890D
17 **Cable, Opener** — BR94-56-880
18 **Vent Assy, Pressure Release** — R/L E016-51-920G
19 **Retainer, Flap¶** — R/L E016-51-924
20 **Gasket¶** — R/L E016-51-922
*¶Included w/Pressure Release Vent Assy*


### INTERIOR TRIM

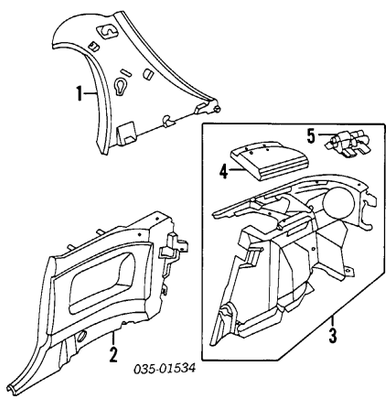



1 **Panel, Upper Trim¶**
1992-93 — R EA01-68-190C-06; L EA01-68-210C-06
1994-96 — R EA17-68-190C-06; L EA17-68-210C-06
*¶Gray listed, Order by Application*
*06 Gray; 28 Taupe*
2 **Panel, Lower Trim (a)**
1992-93
4 Cyl — R E016-68-520E-02; L E016-68-550E-02
6 Cyl — R EA03-68-520E-02; L EA03-68-550E-02
1994-96 — R E041-68-520B-02; L E041-68-550-02
3 **Panel Assy, Rear Trim (a)** — R EA01-68-850G-02; L EA01-68-870G-02
4 **Tray, Side (a) (b)** — R EA01-68-J21-02; L EA01-68-J26-02
5 **Hinge, Tray (a) (b)** — R EA01-68-J22B-02; L EA01-68-J27B-02
*(a) Black listed, Order by Application*
*(b) Included w/Rear Trim Panel Assy*

## LIFTGATE

### SHEET METAL

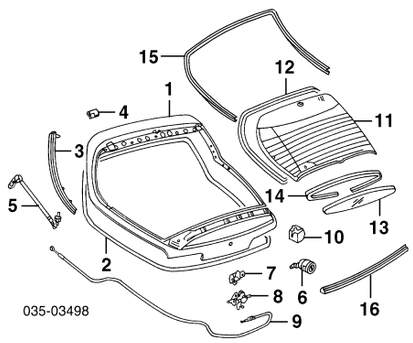


| | | | |
|---|---|---|---|
| 1 | **Shell, Liftgate** | | |
| | w/Rear Wiper | | EAY2-62-020A |
| | w/o Rear Wiper | | EAY1-62-020A |
| 2 | **Weatherstrip, Liftgate** | | EA01-62-761C |
| 3 | **Seal, Liftgate** | R | EA01-62-870A |
| | | L | EA01-63-870A |
| 4 | **Hinge** | R/L | EA01-62-210C |
| 5 | **Stay, Liftgate** | | |
| | USA | | |
| | 4 Cyl | | |
| | w/Rear Wiper | R | 8BE1-62-620B |
| | | L | 8BE1-63-620B |
| | w/o Rear Wiper | R/L | 8BE4-62-620B |
| | 6 Cyl | | |
| | w/Rear Wiper | R | 8BE2-62-620B |
| | | L | 8BE2-63-620B |
| | w/o Rear Wiper | R | 8BE3-62-620B |
| | | L | 8BE3-63-620B |
| | Canada | | |
| | 4 Cyl | R/L | N.A. |
| | 6 Cyl | R/L | N.A. |
| 6 | **Cylinder w/Keys** | | EA01-76-260A |
| 7 | **Striker** | | EA01-62-361A |
| 8 | **Latch** | | EA01-62-310C |
| 9 | **Cable, Release** | | EA02-56-870 |
| 10 | **Guide** | R | EA01-62-681B |
| | | L | EA01-63-681B |
| 11 | **Glass, Liftgate Upper** | | |
| | Mazda | | |
| | w/Rear Wiper | | EB21-63-930 |
| | w/o Rear Wiper | | EA01-63-930D |
| 12 | **Dam, Upper Glass** | 92-93 | E016-50-899A |
| | | 94-95 | E016-50-899A |
| 13 | **Glass, Liftgate Lower** | | |
| | Mazda | | EA01-63-960C |
| 14 | **Dam, Lower Glass** | | GA7B-50-894 |
| | **Emblem** | | |
| | "MAZDA" | | EA25-51-711 |
| | "MX-3" | 92-93 | EA25-51-721 |
| | | 94-96 | EA25-51-721A |
| | "V6" | | E018-51-771A |
| | "Precidia" | | |
| | Canada | | N.A. |
| 15 | **Moulding, Upper Reveal** | | EA01-50-611D |
| 16 | **Moulding, Lower Reveal** | | EA01-50-612D |

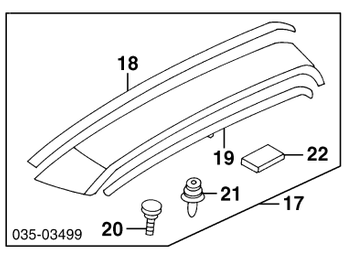



| | | | |
|---|---|---|---|
| 17 | **Garnish Assy, Liftgate** | | EA01-50-810B |
| | **Protector, Garnish¶** | | |
| 18 | Upper | | EA01-50-813B |
| 19 | Lower | | EA01-50-814 |
| 20 | **Bolt, Garnish¶ (8)** | | EA01-50-854B |
| 21 | **Clip, Garnish¶** | | G043-50-742 |
| 22 | **Cushion, Garnish¶ (4)** | | EA01-50-818 |

*¶Included w/Liftgate Garnish Assy*

*Illustration Located in Next Column*

| | | | |
|---|---|---|---|
| 23 | **Spoiler Assy, Rear¶** | | EA02-V4-920 |


*¶Black listed, Order by Application*
*D2 Creek Blue MC; J4 Passion Rose;*

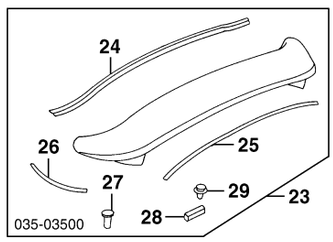


*PT Chaste White; PZ Brilliant Black;*
*SQ Blaze Red; UF Clear White;*
*Z1 Bluish Green Metallic; 3L Silver Stone Metallic*
*4R Passion Yellow Mica; 6C Mighty Gray;*
*6M Elegant Beige; 6V Raspberry Metallic*
*29 Sparkle Green M*


| | | | |
|---|---|---|---|
| 24 | **Protector, Upper (a)** | | EA03-51-966B |
| 25 | **Protector, Lower (a)** | | EA03-51-967 |
| 26 | **Protector, Side (a)** | R/L | EA03-51-968 |
| 27 | **Fastener, Spoiler (a)** | | GJ21-51-964 |
| 28 | **Cushion (a)** | | |
| | Inner | R/L | EA03-51-972A |
| | Outer | R/L | EA03-51-982A |
| 29 | **Bolt, Spoiler (6)** | | 9983-30-508 |

*(a) Included w/Rear Spoiler Assy*

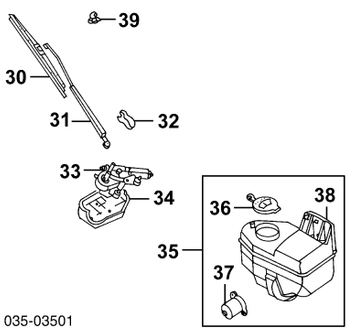


| | | | |
|---|---|---|---|
| 30 | **Blade, Wiper** | | EA05-67-330A |
| 31 | **Arm, Wiper** | | EA01-67-421A |
| 32 | **Cover, Arm** | | B093-76-641 |
| 33 | **Motor, Wiper** | | EA01-67-450B |
| 34 | **Cover, Motor¶** | | EA01-67-459A-02 |
| | *¶Black listed, Order by Application* | | |
| 35 | **Tank Assy, Washer** | | B467-67-480C |
| 36 | **Cap, Tank¶** | | UB39-51-815 |
| 37 | **Pump, Washer¶** | | 8532-76-672 |
| 38 | **Tank, Washer¶** | | B467-67-481C |
| | *¶Included w/Washer Tank Assy* | | |
| 39 | **Nozzle, Washer** | | EA02-67-510 |


## INTERIOR TRIM

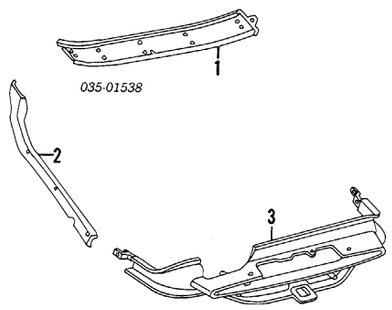



| | | | |
|---|---|---|---|
| 1 | **Panel, Trim Upper¶** | | E040-68-930C-00 |
| 2 | **Panel, Trim Side¶** | R | EA01-68-940E-02 |
| | | L | EA01-68-950E-02 |
| 3 | **Panel, Trim Lower¶** | | |
| | USA | | |
| | w/Rear Wiper | | E018-68-960C-02 |
| | w/o Rear Wiper | | EA01-68-960C-02 |
| | Canada | | N.A. |

*¶Black listed, Order by Application*

## REAR SUSPENSION

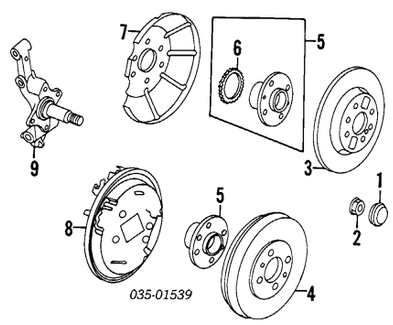


| | | | |
|---|---|---|---|
| 1 | **Cap, Dust** | R/L | B455-26-071 |
| 2 | **Nut, Axle** | R/L | GJ21-33-042B |
| 3 | **Rotor, Brake** | R/L | BB4C-26-251C |
| 4 | **Drum, Brake** | R/L | D102-26-251 |
| 5 | **Hub Assy** | | |
| | w/ABS | R/L | B603-26-15XA |
| | w/o ABS | R/L | B455-26-15XA |
| 6 | **Ring, Sensor¶** | R/L | B603-26-471A |
| | *¶Included w/Hub Assy* | | |
| | **Caliper, Brake** | | |
| | w/Pads | R | EAY6-26-98ZR |
| | | L | EAY6-26-99ZR |
| | w/o Pads | R/L | EAY6-26-98ZR |
| 7 | **Shield, Splash** | R/L | B613-26-261A |
| 8 | **Plate, Backing** | R | B596-26-280B |
| | | L | BC1D-26-290A |
| 9 | **Spindle** | | |
| | 4 Cyl | R | B455-26-111D |
| | | L | B455-26-115D |
| | 6 Cyl | | |
| | w/ABS | R | B603-26-111 |
| | | L | B603-26-115B |
| | w/o ABS | R | B461-26-111B |
| | | L | B461-26-115B |

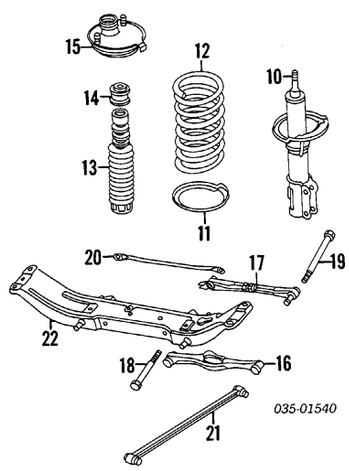



| | | | |
|---|---|---|---|
| 10 | **Strut¶** | | |
| | 4 Cyl | | |
| | w/ABS | R | E026-28-700B |
| | | L | E026-28-900B |
| | w/o ABS | R | EA02-28-700B-9U |
| | | L | EA02-28-900B-9U |
| | 6 Cyl | | |
| | w/ABS | R | E026-28-700B |
| | | L | E026-28-900B |
| | w/o ABS | R | EA02-28-700B-9U |
| | | L | EA02-28-900B-9U |
| | *¶Order by Application* | | |
| 11 | **Seat, Spring** | R/L | B455-28-0A3 |
| 12 | **Spring, Coil¶** | R/L | EA01-28-011 |
| | *¶Order by Application* | | |
| 13 | **Boot, Dust** | R/L | B455-28-111A |
| 14 | **Stopper, Rubber** | R/L | B455-28-340A |
| 15 | **Insulator, Mounting** | | |
| | 4 Cyl | R/L | B595-28-390A |
| | 6 Cyl | R/L | B595-28-390A |
| 16 | **Link, Front Lateral** | R | E016-28-620B |
| | | L | E016-28-630B |
| 17 | **Link, Rear Lateral** | R/L | EA01-28-600 |
| | **Bolt, Lateral Link** | | |
| 18 | Front | R/L | B528-28-112A |
| 19 | Rear | R/L | B455-28-113 |
| 20 | **Rod, Strut** | | |
| | 6 Cyl | | E018-28-671A |
| 21 | **Link, Trailing** | | |
| | 4 Cyl | R | BR74-28-200A |
| | | L | BR74-28-250 |




**Labor Times Shown are for Replacement with New OEM Undamaged Parts on New Undamaged Vehicles.**
**Comments or suggestions? Need assistance? Call 1-800-854-7030 or 858-578-6550. Ext. 8220. Fax 1-888-256-7969 or 858-549-0629.**

| | | |
|---|---|---|
| 6 Cyl | R | EA01-28-200 |
| | L | EA01-28-250 |
| 22 **Crossmember** | | E016-28-400A |

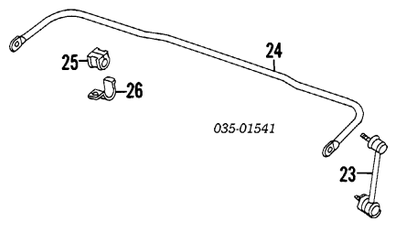


| | | |
|---|---|---|
| 23 **Link, Stabilizer Bar** | R/L | EA01-28-170B |
| 24 **Bar, Stabilizer** | | |
| 4 Cyl | | EA01-28-151C |
| 6 Cyl | | EA03-28-151C |
| 25 **Bushing, Bar** | R/L | BW0A-28-156A |
| 26 **Bracket, Bushing** | R/L | E016-28-15YB |


## FUEL TANK

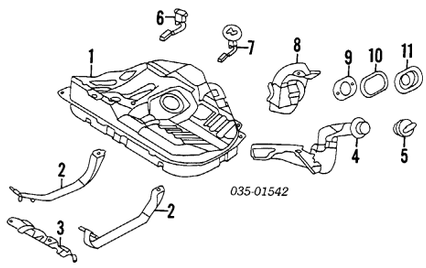


| | | |
|---|---|---|
| 1 **Tank, Fuel** | | BR93-42-110B |
| 2 **Band, Tank Mtg** | R | B467-42-710F |
| | L | BR93-42-720B |
| 3 **Insulator, Tank** | | B455-42-751A |
| 4 **Pipe, Filler** | | EA01-42-210 |
| 5 **Cap, Filler** | | GN60-42-250 |
| 6 **Gauge, Fuel Tank** | | B475-60-960A |
| 7 **Pump, Fuel** | | B3E7-13-35ZB |
| 8 **Protector, Pipe** | | B467-42-291A |
| 9 **Gasket, Pipe** | | BF71-42-243 |
| 10 **Seal, Pipe** | | B455-42-244 |
| 11 **Cover, Lever** | | B455-42-242A |


## REAR BODY

### SHEET METAL

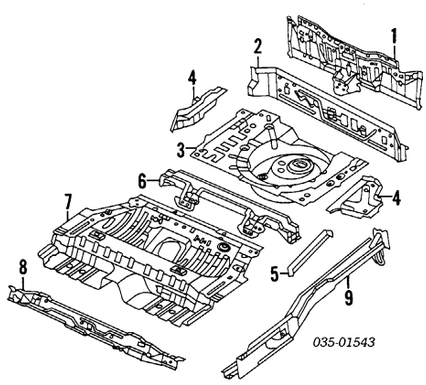




| | | |
|---|---|---|
| 1 **Panel, Rear Body** | | EA01-70-750C |
| 2 **Panel, Lower** | | B467-53-940D |
| 3 **Pan, Rear Floor** | | BR93-53-730C |
| 4 **Extension, Floor Pan** | R | B467-53-740F |
| | L | B467-54-741C |
| 5 **Reinforcement, Side** | R | B455-53-715A |
| | L | B455-54-715A |
| 6 **Crossmember, Rear** | | B467-53-930D |
| 7 **Pan, Center Floor** | | BR93-53-720D |
| 8 **Crossmember, Center** | | B455-53-900F |
| 9 **Rail, Frame** | R | EA01-53-810G |
| | L | EA01-54-810F |

### INTERIOR TRIM

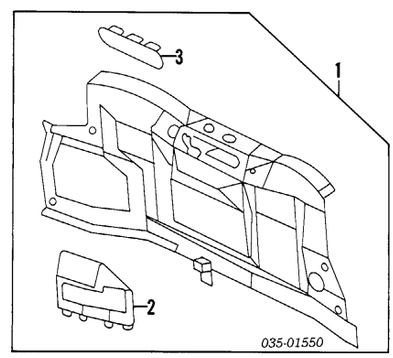


| | | |
|---|---|---|
| 1 **Panel Assy, Trim (a)** | | EA01-68-89XB-02 |
| 2 **Cover, Jack¶ (a)** | | B467-68-8S0A-02 |
| 3 **Cover, Center¶ (a)** | | B499-68-893-02 |
| *¶Included w/Trim Panel Assy* | | |
| *(a) Black listed, Order by Application* | | |

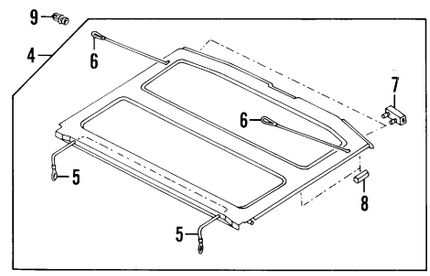


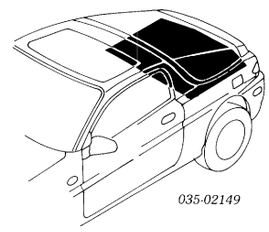
| | | |
|---|---|---|
| 4 **Cover Assy, Luggage Compartment¶** | | EA01-68-310C-02 |
| *¶Black listed, Order by Application* | | |
| *02 Black; 26 Dark Taupe* | | |
| 5 **Strap, Front (a)** | R/L | B467-68-315 |
| 6 **Strap, Rear (a)** | R/L | EA02-68-315 |
| 7 **Rubber, Cushion (a)** | R/L | B060-68-318 |
| 8 **Pad, Cover (a) (2/Side)** | R/L | B060-68-318 |
| *(a) Included w/Luggage Compartment Cover Assy* | | |
| 9 **Hanger, Strap** | R/L | E016-68-301 |


## REAR LAMPS

### COMBINATION LAMP

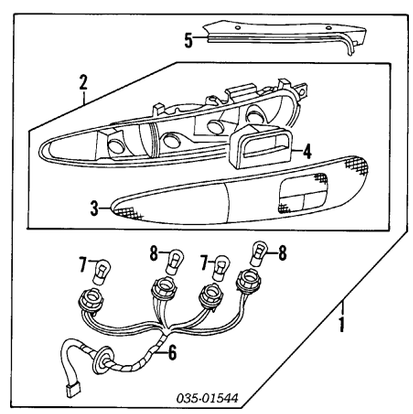



| | | |
|---|---|---|
| 1 **Lamp Assy, Combination** | R | 8BE6-51-150 |
| | L | 8BE6-51-160 |
| 2 **Lens & Body Assy¶** | R | E016-51-170C |
| | L | E016-51-180C |
| 3 **Lens¶ (a)** | R | E016-51-151C |
| | L | E016-51-161C |
| 4 **Housing¶ (a)** | R | EA01-51-176 |
| | L | EA01-51-186 |
| *(a) Included w/Lens & Body Assy* | | |
| 5 **Bezel¶** | R | EA01-51-174A |
| | L | EA01-51-184A |
| 6 **Socket & Wire¶** | R/L | EA01-51-155 |
| 7 **Bulb, Single Element¶** | R/L | 0000-11-0194 |
| 8 **Bulb, Dual Element¶** | R/L | 0000-11-1157 |
| *¶Included w/Combination Lamp Assy* | | |

### LICENSE LAMP

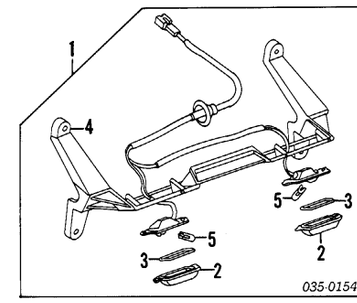



| | | |
|---|---|---|
| 1 **Lamp Assy, License** | | 8BE1-51-270 |
| 2 **Lens¶** | R/L | G225-51-274B |
| 3 **Gasket¶** | R/L | G225-51-273 |
| 4 **Bracket, Lamp¶** | R/L | EA01-51-261A |
| 5 **Bulb¶** | R/L | 0000-11-0194 |
| *¶Included w/License Lamp Assy* | | |

### SIDE MARKER LAMP

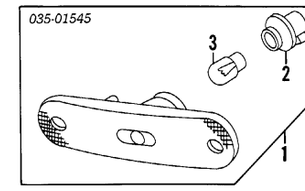


| | | |
|---|---|---|
| 1 **Lamp Assy, Side Marker** | R | EA01-51-5H0 |
| | L | EA01-51-5J0 |
| 2 **Socket¶** | R/L | BW3N-51-584 |
| 3 **Bulb¶** | R/L | 0000-11-0194 |
| *¶Included w/Side Marker Lamp Assy* | | |

### HIGH MOUNT STOP LAMP

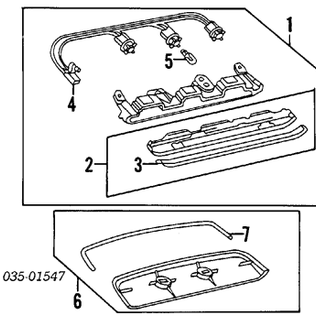


| | | |
|---|---|---|
| 1 **Lamp Assy, Stop** | | E016-51-580C |
| 2 **Lens Assy¶** | | E016-51-58XB |
| 3 **Bezel, Lens¶ (a)** | | E016-51-589A |
| *(a) Included w/Lens Assy* | | |
| 4 **Socket & Wire¶** | | E016-51-584 |
| 5 **Bulb¶ (3)** | | 0000-11-0921 |
| *¶Included w/Stop Lamp Assy* | | |
| 6 **Cover Assy, Lamp (a)** | | E016-51-58YB-02 |
| *(a) Black listed, Order by Application* | | |
| *02 Black; 26 Taupe* | | |
| 7 **Gasket¶** | | E016-51-582B |
| *¶Included w/Lamp Cover Assy* | | |